



RZ-HD 54in Mower

Model No. RSZL115427CXI—Serial No. 40000000 and Up

Parts Catalog



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly	4
Frame with Decals Assembly No. 148-0997	6
Transmission Assembly	8
Body Styling Assembly	10
Fuel Tank Assembly	12
Fuel Tank Assembly No. 467-0001-00	14
Seat Assembly	16
Motion Control and Parking Brake Assembly	18
Caster Tire Assembly	20
Drive Wheel Assembly	22
Electrical Assembly	24
Decklift Assembly	26
Engine Assembly	28
54 Inch Cutting Deck Assembly	30
Deck Decal Assembly No. 148-0977	32
Seat Suspension Assembly	34


Main Frame Assembly

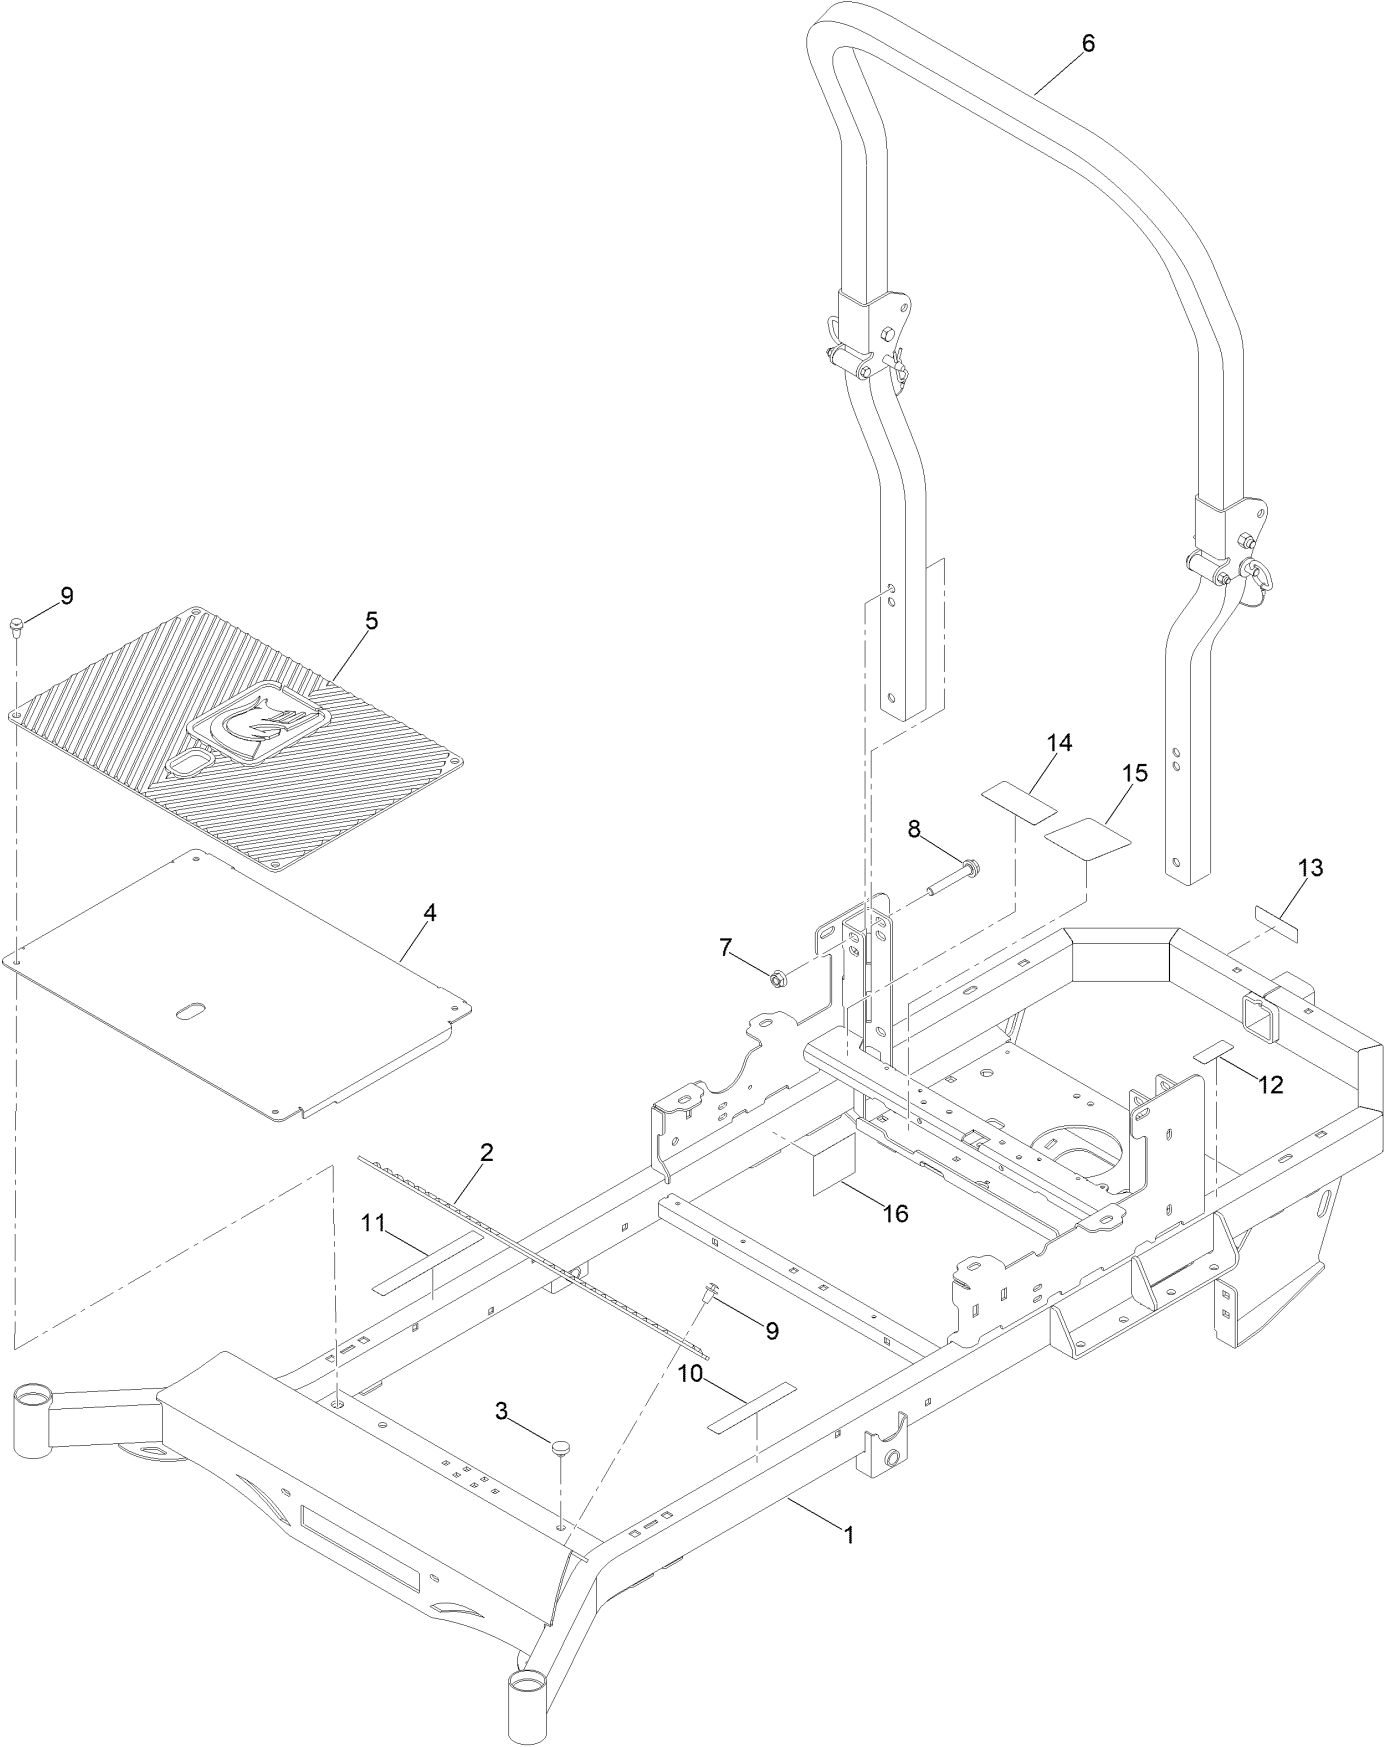

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	148-0970-P11	1	Ztr Frame ASM	9	414-0002-00	10	8MM Push Type Retainer Nylon Black
1	148-0997	1	Frame ASM-Decals	10	148-1094	1	Decal-Warning
2	481-0005-00	1	Mwr Rubber Foot Rest Mat	11	148-1095	1	Decal-Warning
3	429-0002-00	2	Push-In Rubber Bumper Mwr Floor	12	127-0392	1	Decal-Hot Surface
4	439-0007-00-P11	1	Mwr Floorboard Paint	13	147-7364	1	Decal-Hitch
5	481-0006-00	1	Mwr Logo Floor Mat	14	148-1308	1	Decal-Warn Rotating Device
6	148-0233	1	ROPS	15	148-0466	1	Decal-Pump Belt Routing-Parker
7	413-0014-00	4	1/2-13 Hex Stover Locknut GR C Zinc	16	148-1191	1	Decal-Epa
8	418-0019-00	4	Bolt-HF				


Frame with Decals Assembly No. 148-0997

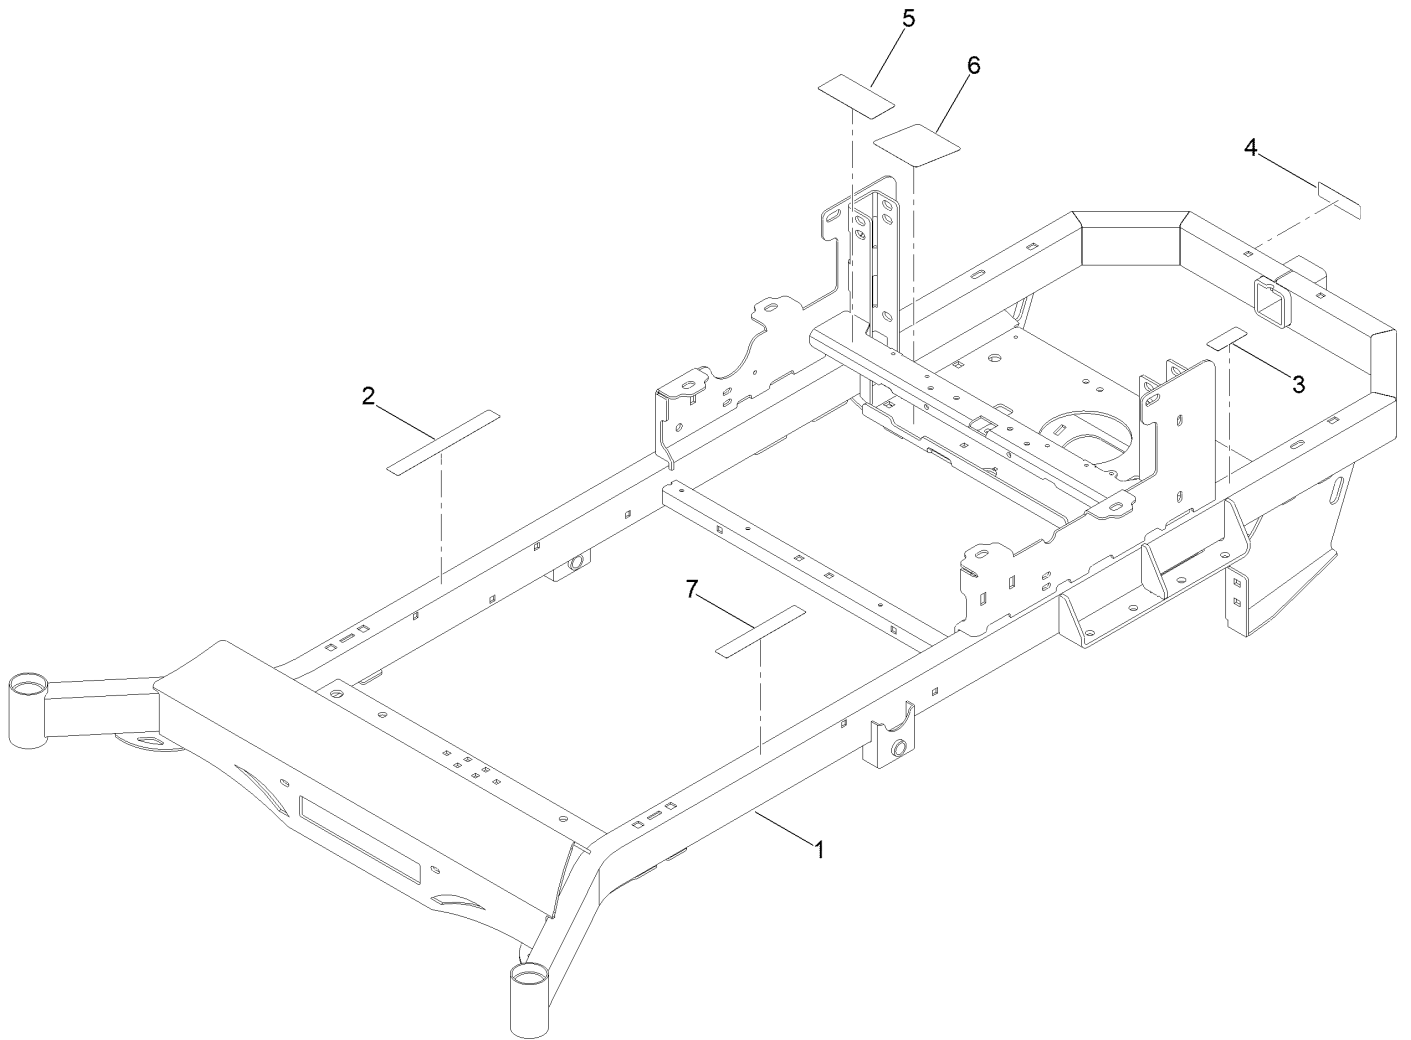

Frame with Decals Assembly No. 148-0997 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	148-0970-P11	1	Ztr Frame ASM	5	148-1308	1	Decal-Warn Rotating Device
2	148-1095	1	Decal-Warning	6	148-0466	1	Decal-Pump Belt Routing-Parker
3	127-0392	1	Decal-Hot Surface	7	148-1094	1	Decal-Warning
4	147-7364	1	Decal-Hitch				


Transmission Assembly

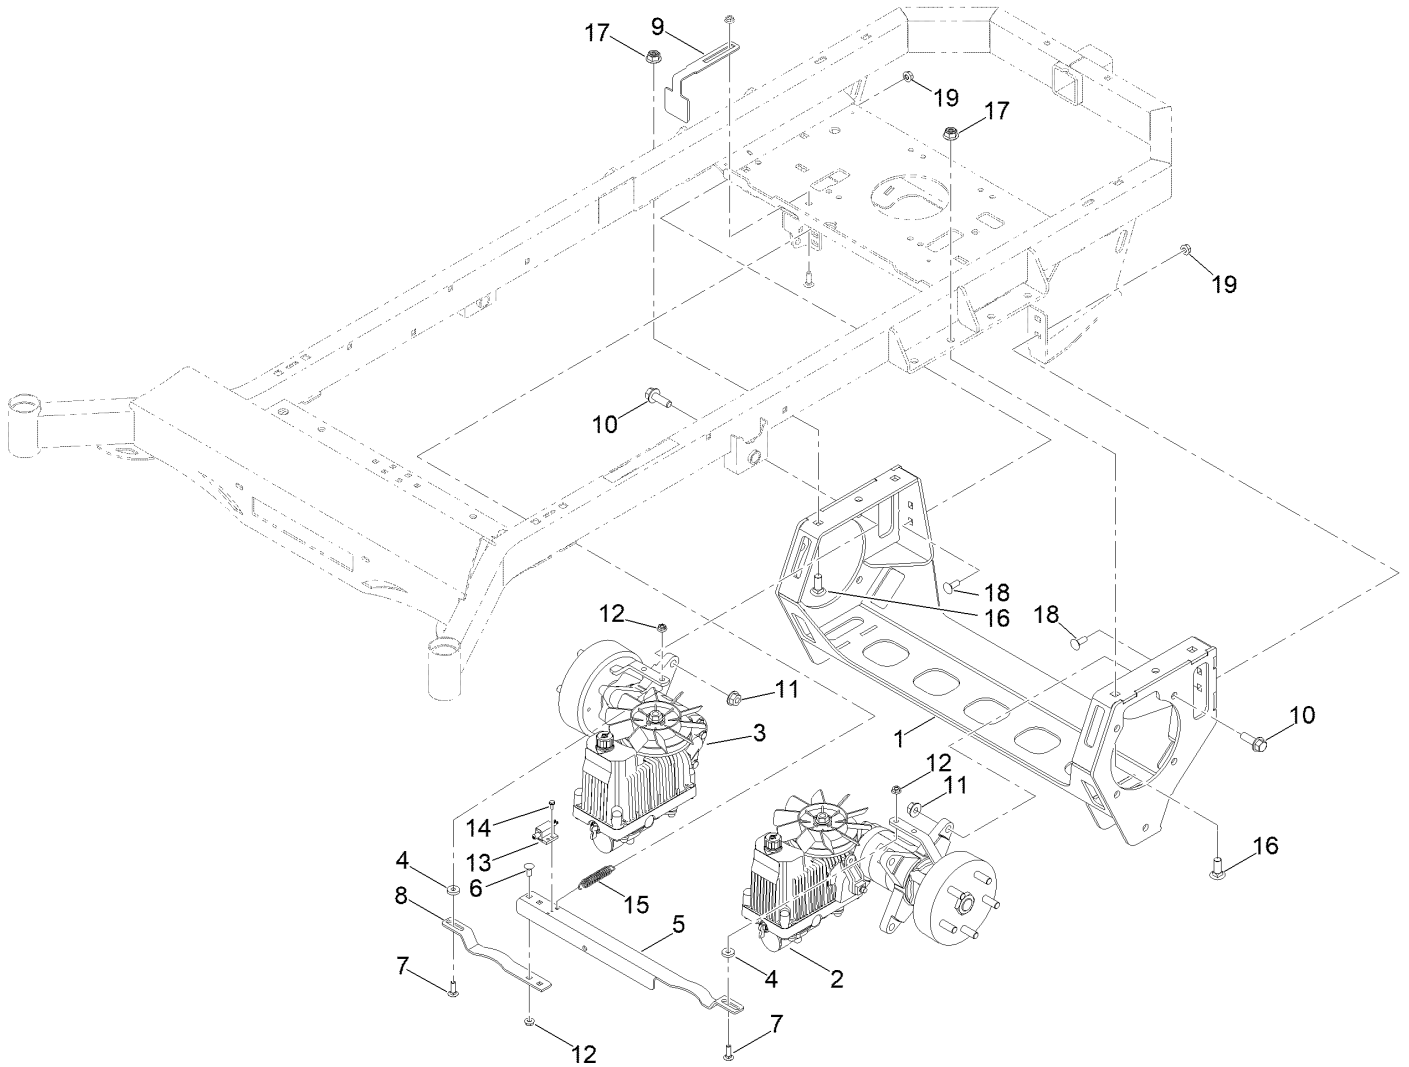

Transmission Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	148-0985-P11	1	Hydro Frame ASM	10	100-6116	8	Screw-HHF
2	450-0009-00	1	Hte10 Lt Side Hydrost Transm For Rz Hub	11	32128-49	8	Nut-HHF
3	450-0010-00	1	Hte10 Rt Side Hydrost Transm For Rz Hub	12	413-0027-00	4	Nut-HF, NI
4	419-0006-00	2	.312 ID X .875OD X .1875 THK F/W NYL	13	486-0030-00	1	No Plunger Limit Switch
5	439-0607-00-P11	1	Mwr Park Brake Brkt Lt Paint	14	418-0032-00	2	8-32 X 1/2 Ind. HWH Slot Type F Tcs Zinc
6	418-0008-00	2	Bolt-CARR	15	434-0003-00	1	Mwr Brake Pedal Release Spring
7	418-0010-00	2	Bolt-CARR	16	148-1262	4	Screw-CARR,Patch
8	439-0606-00-P11	1	Mwr Park Brake Brkt Rt Paint	17	413-1005-00	4	1/2-13 Hex Flange 2-Way Rev Cntr L/Nyz
9	439-0066-00-P11	1	Stand Trans Brake Interlock Brkt Paint	18	418-0045-00	4	3/8-16 X 1 Carriage Bolt Yz GR.8
				19	413-0029-00	4	Nut-Hex


Body Styling Assembly

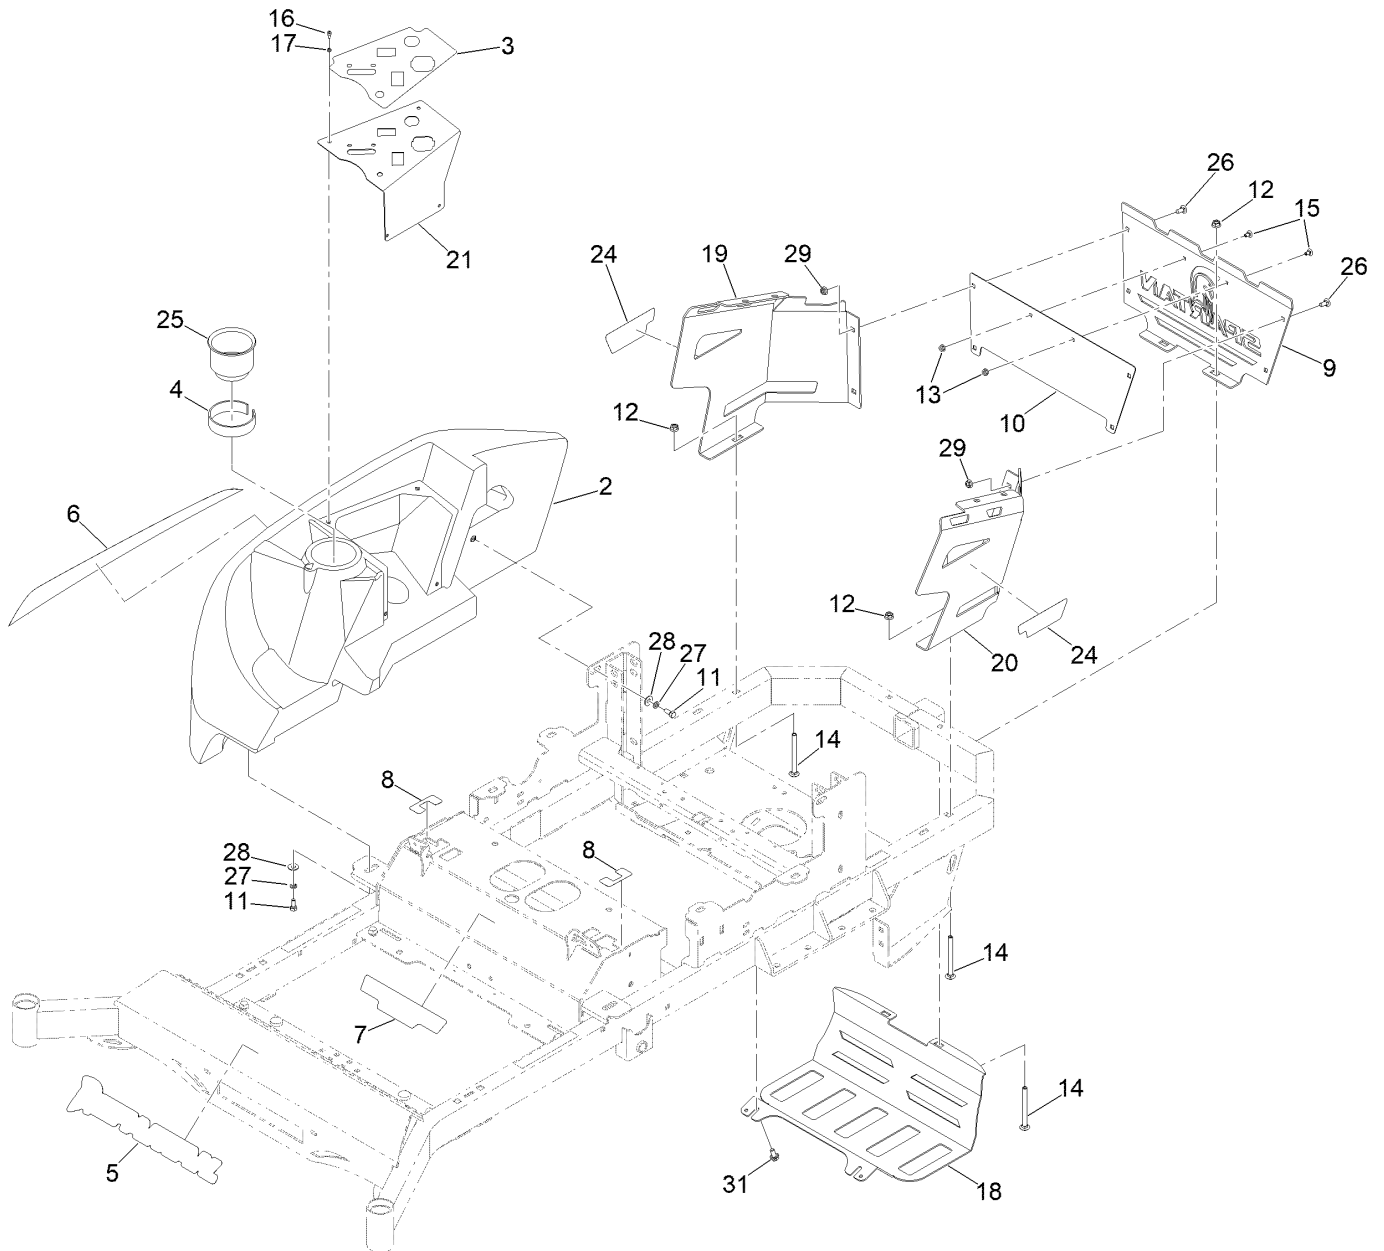

Body Styling Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	148-0307	1	Console W/ Cupholder	16	418-0055-00	4	10-24 X 1/2 Socket C/S 18-8 SS
3	148-1097	1	Decal-Control Panel	17	419-0011-00	4	#10 Split Lockwasher 18-8 SS
4	148-0770	1	Tape-Foam	18	148-1172-P11	1	Muffler Guard [gray]
5	148-0801	1	Decal-Spartan, Front	19	439-0691-00-P11	1	2021 Rt/Srt Engn Cowling Rtpainted
6	148-0845	1	Decal-Tank	20	439-0692-00-P11	1	2021 Rt/Srt Engn Cowling Lt Painted
7	148-0870	1	Decal-Rz-HD Gt Trac Model	21	148-1042-05	1	Rt 45 Key Mnt
8	148-1056	2	Decal-Motion Control	24	148-0863	2	Decal-Model
9	148-1067-P11	1	Plate - Engine Cowling	25	780-2220-00	1	Cup Holder
10	148-1068-P12	1	Plate -Backer Plate	26	418-0008-00	4	Bolt-CARR
11	418-0054-00	4	Screw-HH	27	3253-4	4	Washer-Lock
12	413-0013-00	4	3/8-16 Nylon Insert Flange L/Nut Yz	28	419-0007-00	4	Washer-Flat
13	413-0023-00	2	1/4-20 Hex Flange Nut W/Serr Zinc	29	413-0022-00	4	Nut-HF
14	418-0018-00	4	3/8-16 X 4 Carriage Bolt Zinc	31	418-0049-00	2	Bolt-HWH
15	418-0031-00	2	1/4-20 X 1/2 Carriage Bolt,Yz				


Fuel Tank Assembly

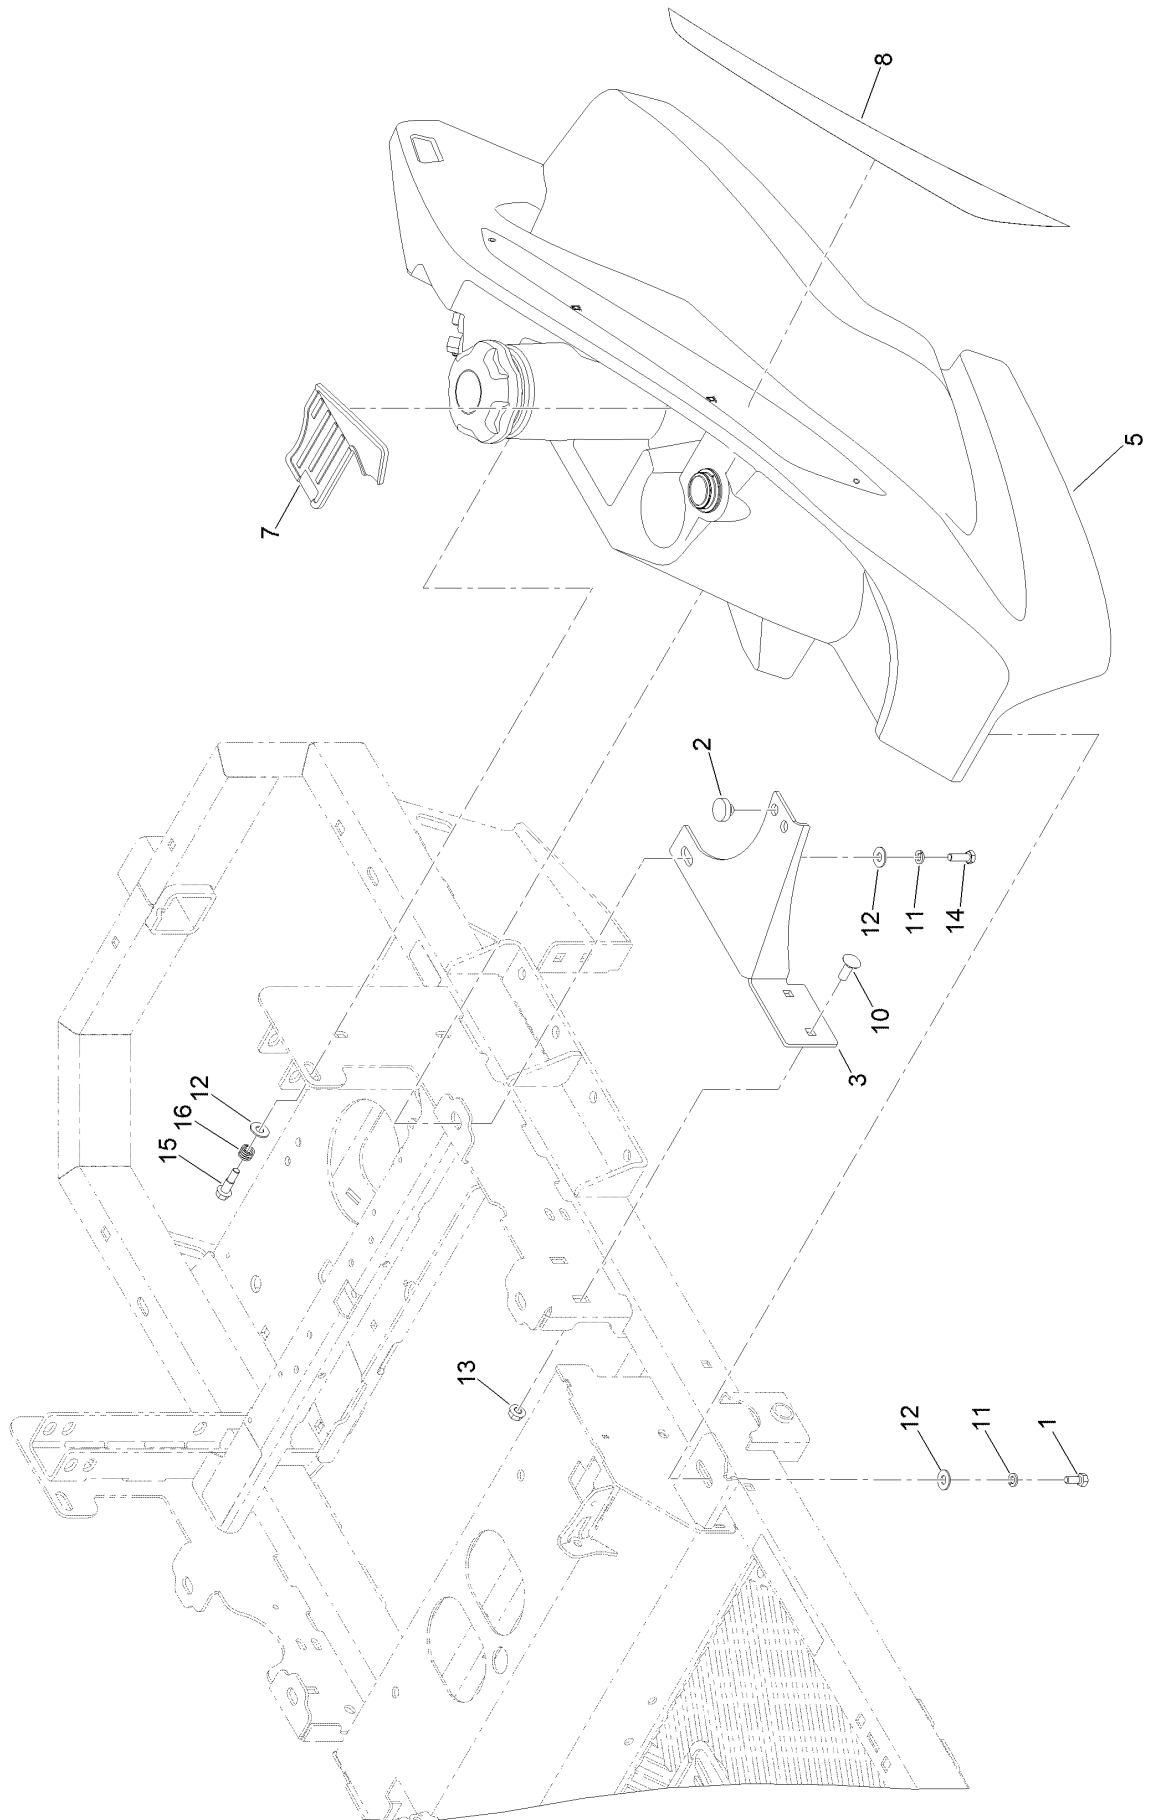

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	418-0054-00	2	Screw-HH	10	418-0045-00	2	3/8-16 X 1 Carriage Bolt Yz GR.8
2	429-0002-00	2	Push-In Rubber Bumper Mwr Floor	11	3253-4	3	Washer-Lock
3	148-0478-P11	1	Bracket-Tank Support	12	419-0007-00	4	Washer-Flat
5	467-0001-00	1	Mwr Gasoline Fuel Tank Assy	13	413-0020-00	2	3/8-16 Hex Flange Nut W/Serr Zinc Yellow
7	481-0004-00	1	Rubber Tank Storage Compartment Insert	14	418-0108-00	1	Screw-HH
8	148-0844	1	Decal-Tank	15	418-0287-00	1	Screw-Shoulder,HHF
				16	434-0020-00	1	Spring-Compression


Fuel Tank Assembly No. 467-0001-00

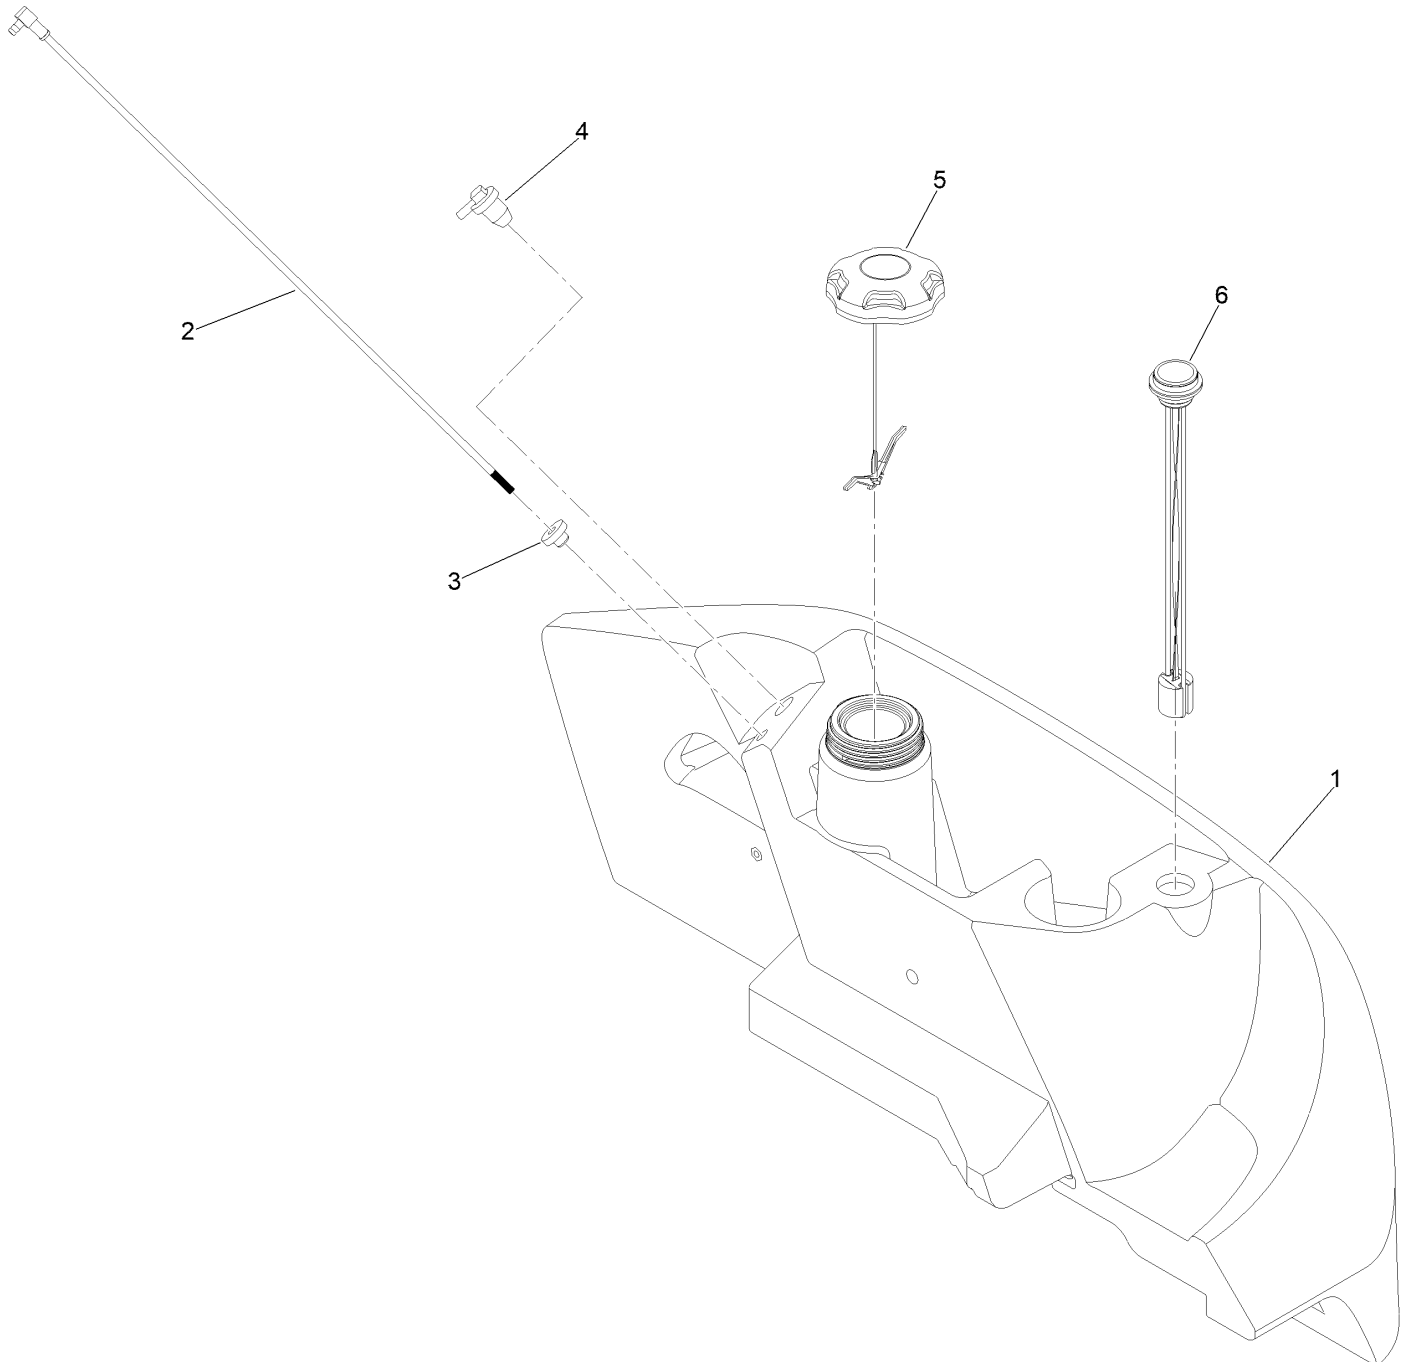

Fuel Tank Assembly No. 467-0001-00 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	467-0011-00	1	Rz Fuel Pickup Tube (Solar Tank)	4	467-0006-00	1	Remote Tank Vent Valve W/Grommet
2	467-0012-00	1	25.14In Fuel Pickup Tube W/Filter Screen	5	467-0008-00	1	Kelch Tank Fill Neck Non-Ventcap(204541)
3	467-0005-00	1	Fuel Pickup Tube Gromm Nitrdapco 10672	6	467-0035-00	1	Rt/Srt Rochester Fuel Gauge


Seat Assembly

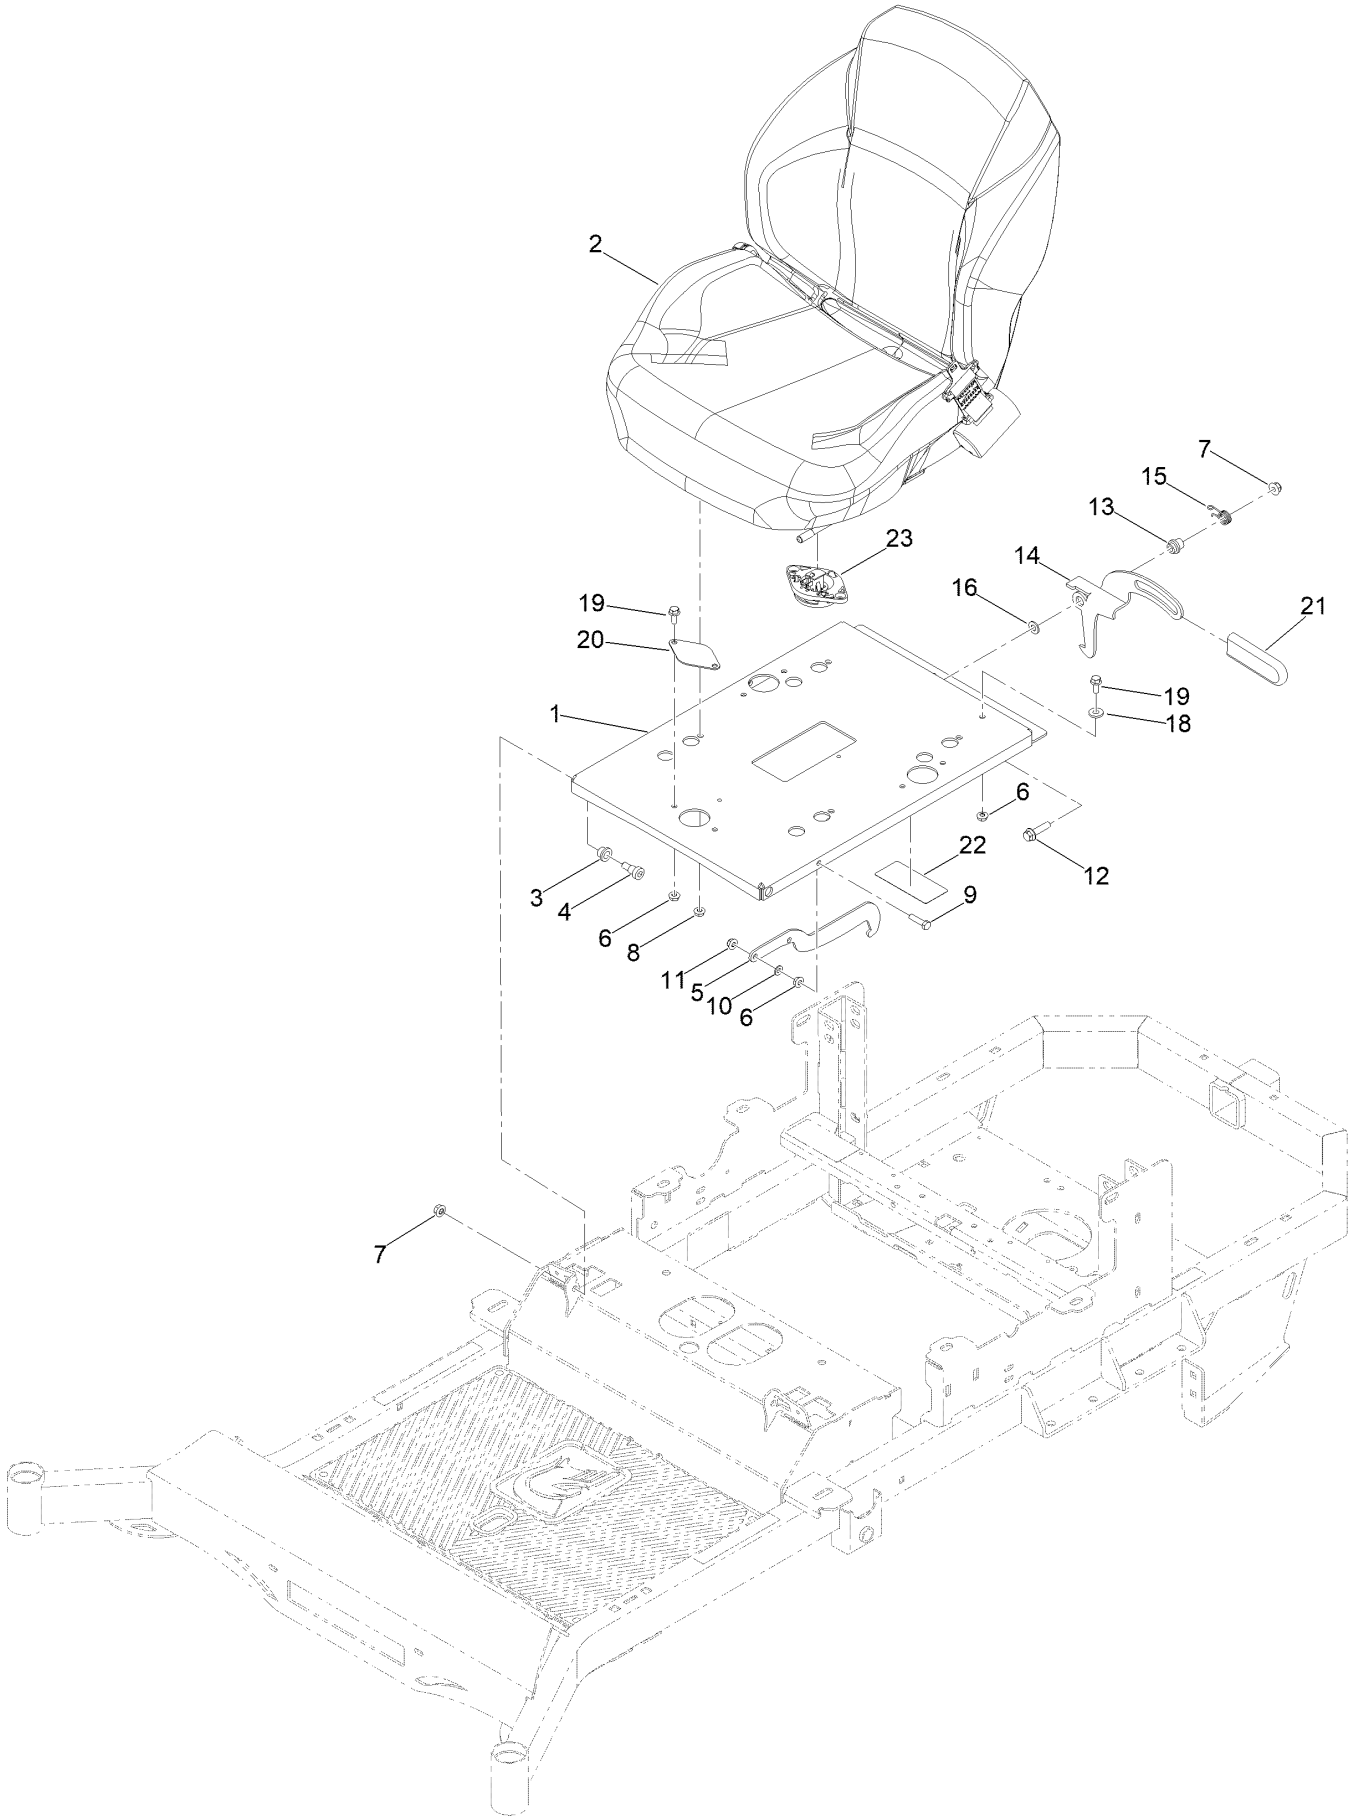

Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	148-1047	1	Non 360 Seat Base Plate Safety Decal ASM-	11	413-0027-00	1	Nut-HF, NI
2	471-0035-00	1	Rt Pro Seat	12	114-4681	1	Screw-HHF
3	410-0010-00	2	1/2In ID X 5/8In OD X 1/2In Flange Bush	13	107-0075	1	Bushing-Latch, Seat
4	418-0038-00	2	1/2 X 1/2 Socket Shoulder Bolt Zc Yellow	14	148-0953	1	Bracket-Latch
5	439-0065-00-P11	1	Mwr Seat Latch Hook Paint	15	126-8923	1	Spring-Torsion, Latch
6	413-0022-00	4	Nut-HF	16	3256-24	1	Washer-Plain
7	413-0029-00	3	Nut-Hex	18	419-0006-00	1	.312 ID X .875OD X .1875 THK F/W NYL
8	413-0019-00	4	5/16-18 Nylon Insert Flange L/Nut Zc	19	116-7230	3	Screw-HHF
9	322-47	1	Screw-HH	20	426-0241-00-P11	1	2020 Rt/Srt Univ Float Seat Cvr PLT
10	413-0016-00	1	.312ldx.625Odx.062 THK Thrust Brg Oi Brz	21	484-0002-00	1	Stand Up Mwr Brake Arm Grip
				22	125-8473	1	Decal-Warning, Battery
				23	486-0036-00	1	Mwr Seat Switch


Motion Control and Parking Brake Assembly

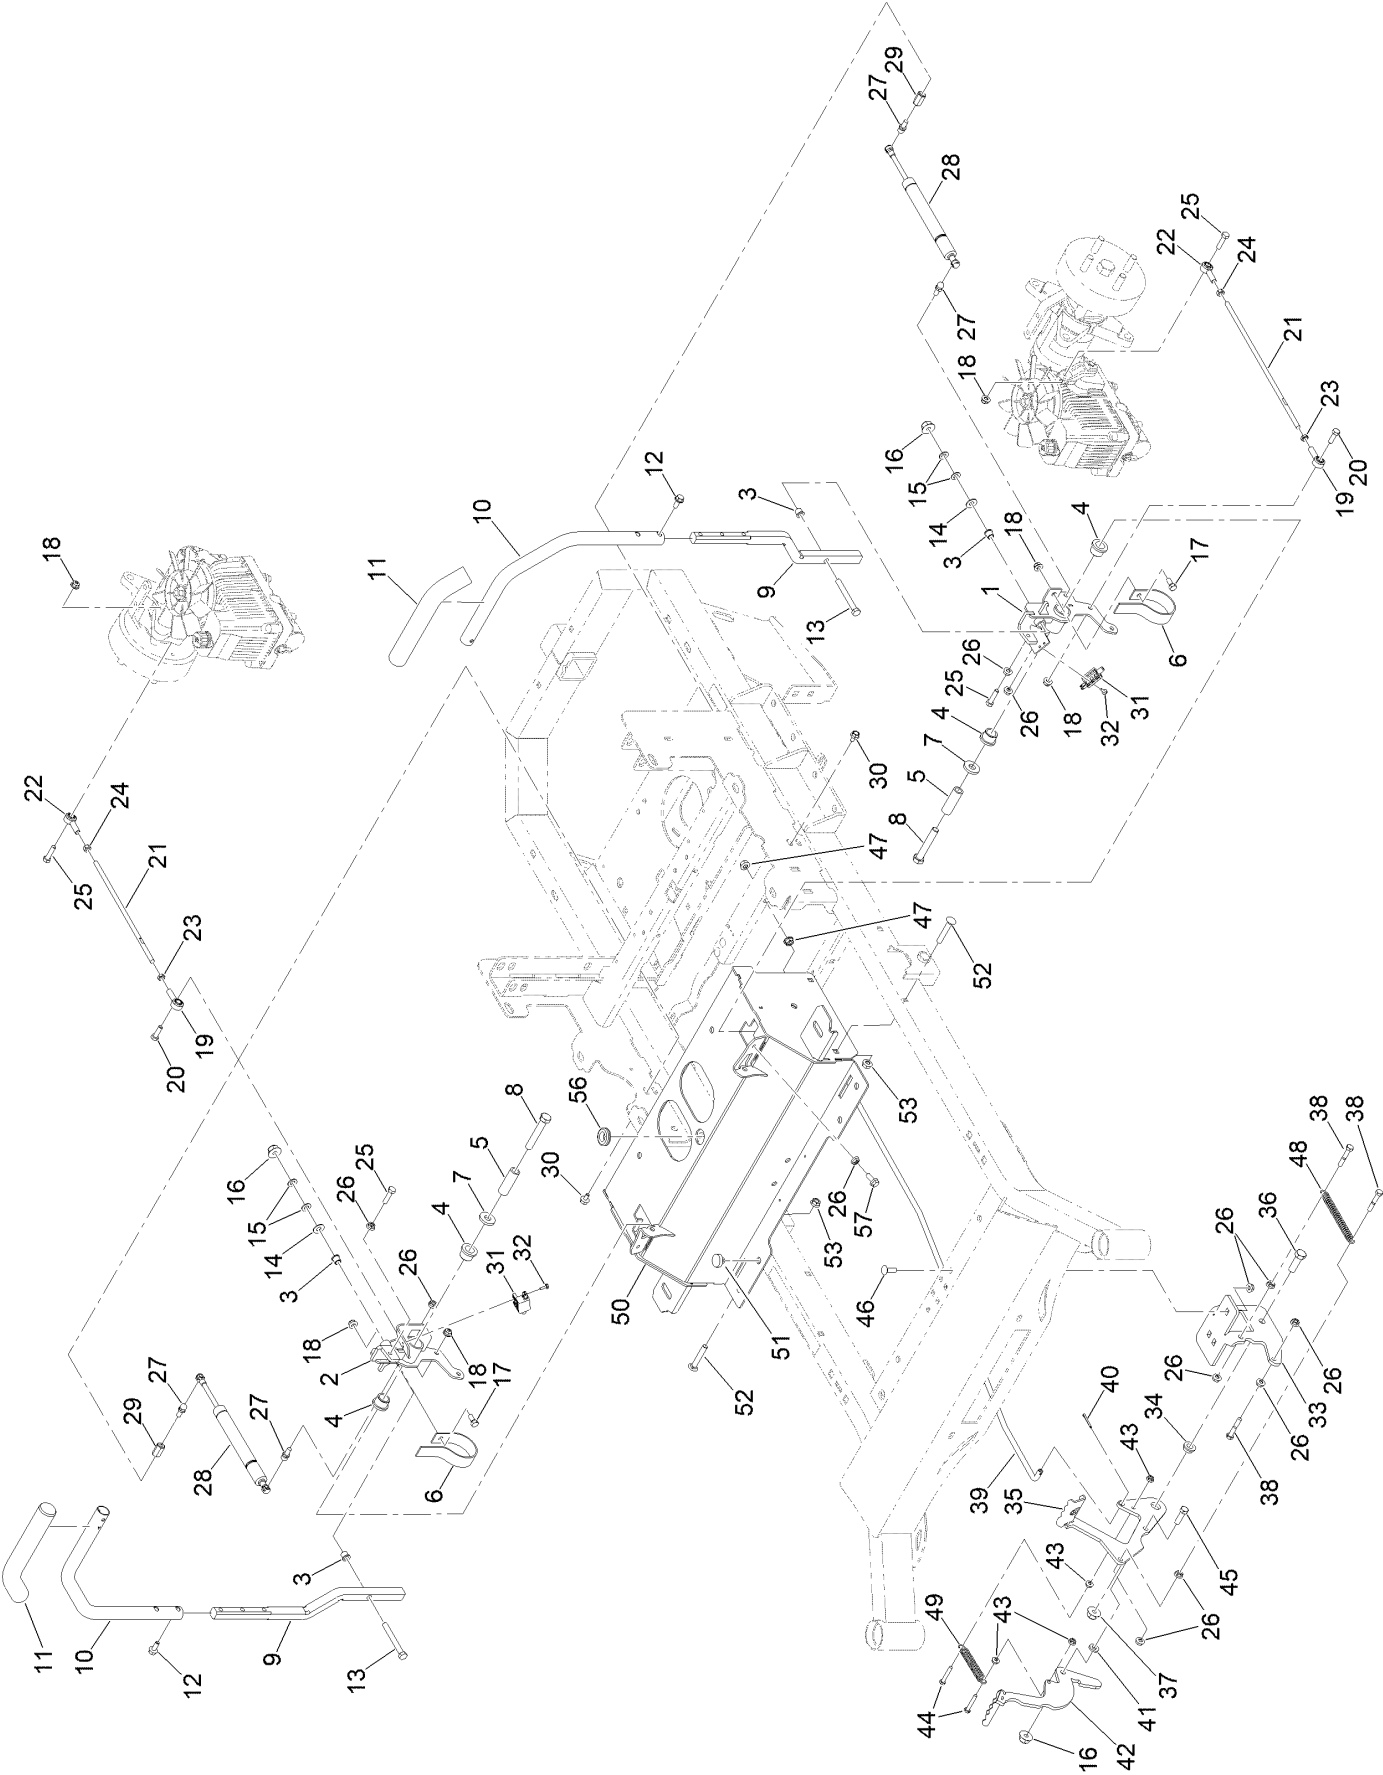

Motion Control and Parking Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	148-0888-05	1	LH Pivot ASM	31	486-0030-00	2	No Plunger Limit Switch
2	148-0889-05	1	RH Pivot ASM	32	418-0032-00	4	8-32 X 1/2 Ind. HWH Slot Type F Tcs Zinc
3	148-0886	4	Bushing-Flange	33	439-0009-00-P11	1	Mwr Frame Brake Mtg Brkt Paint
4	148-0897	4	Bushing-Flange	34	410-0009-00	1	1/2In ID X 3/4In OD X 3/8In Flange Bush
5	148-0885	2	Sleeve-Pivot	35	490-0016-00-P11	1	Mwr Brake Lock Lever Assy Painted
6	109-5575	2	Spring-Leaf	36	139-2631	1	Screw-HH
7	419-0003-00	2	1/2 Fender Washer 1-1/4In OD Zinc	37	413-0002-00	1	Nut-Lock
8	418-0050-00	2	1/2-13 X 3 Hex C/S GR 5 Zinc W/LocTite	38	418-0027-00	3	Bolt-HH
9	431-0001-00	2	Height Adjustable Control Arm	39	435-0004-00	1	Mwr Brake Linkage
10	403-0020-10-P11	2	Mower Drive Handle Tube Abc	40	3272-11	1	Pin-Cotter
11	484-0001-00	2	Control Arm Handle Grip	41	413-0052-00	1	3/8 ID X 3/4 OD X .125 THK Bronze Washer
12	116-7230	4	Screw-HHF	42	490-0017-00-P11	1	Mwr Brake Unlock Lever Assy Painted
13	323-20	2	Screw-HH	43	413-0012-00	4	1/4-20 Hex Flange Nut
14	419-0007-00	2	Washer-Flat	44	418-0029-00	2	1/4-20 X 1-1/4 Hex C/S GR 2 Zinc
15	148-1012	4	Washer-Belleville	45	323-7	1	Screw-HH
16	413-0013-00	3	3/8-16 Nylon Insert Flange L/Nut Yz	46	418-0010-00	3	Bolt-CARR
17	418-0054-00	2	Screw-HH	47	413-0020-00	2	3/8-16 Hex Flange Nut W/Serr Zinc Yellow
18	413-0027-00	6	Nut-HF, NI	48	434-0015-00	1	2020 Mwr Brake Pedal Tension Spring
19	410-0070-00	2	5/16-24 Spher Rod End Zinc LH Thd Fem	49	434-0003-00	1	Mwr Brake Pedal Release Spring
20	AU426-516	2	Screw-HH	50	148-0911-P11	1	ASM, Gt-Trac [gray]
21	435-0033-00	2	1310 Ttq Drive Arm Rod	51	429-0002-00	2	Push-In Rubber Bumper Mwr Floor
22	410-0071-00	2	5/16-24 Spher Rod End Zinc RH Thd Fem	52	618-2023-00	4	Screw-CARR
23	3220-20	2	Nut-Jam	53	413-0029-00	4	Nut-Hex
24	09207	2	Nut	56	240-6	1	Grommet-Rubber
25	322-47	4	Screw-HH	57	418-0048-00	2	5/16-18 X 3/4 Hex Flange Bolt GR 8 Yz
26	413-0022-00	15	Nut-HF				
27	487-0005-00	4	5/16-18X1.286 Damper Ball Stud (.562 TI)				
28	487-0001-00	2	Control Arm Damper				
29	613-0065-00	2	Standoff-Hex				
30	3234-28	2	Screw-HHF				


Caster Tire Assembly

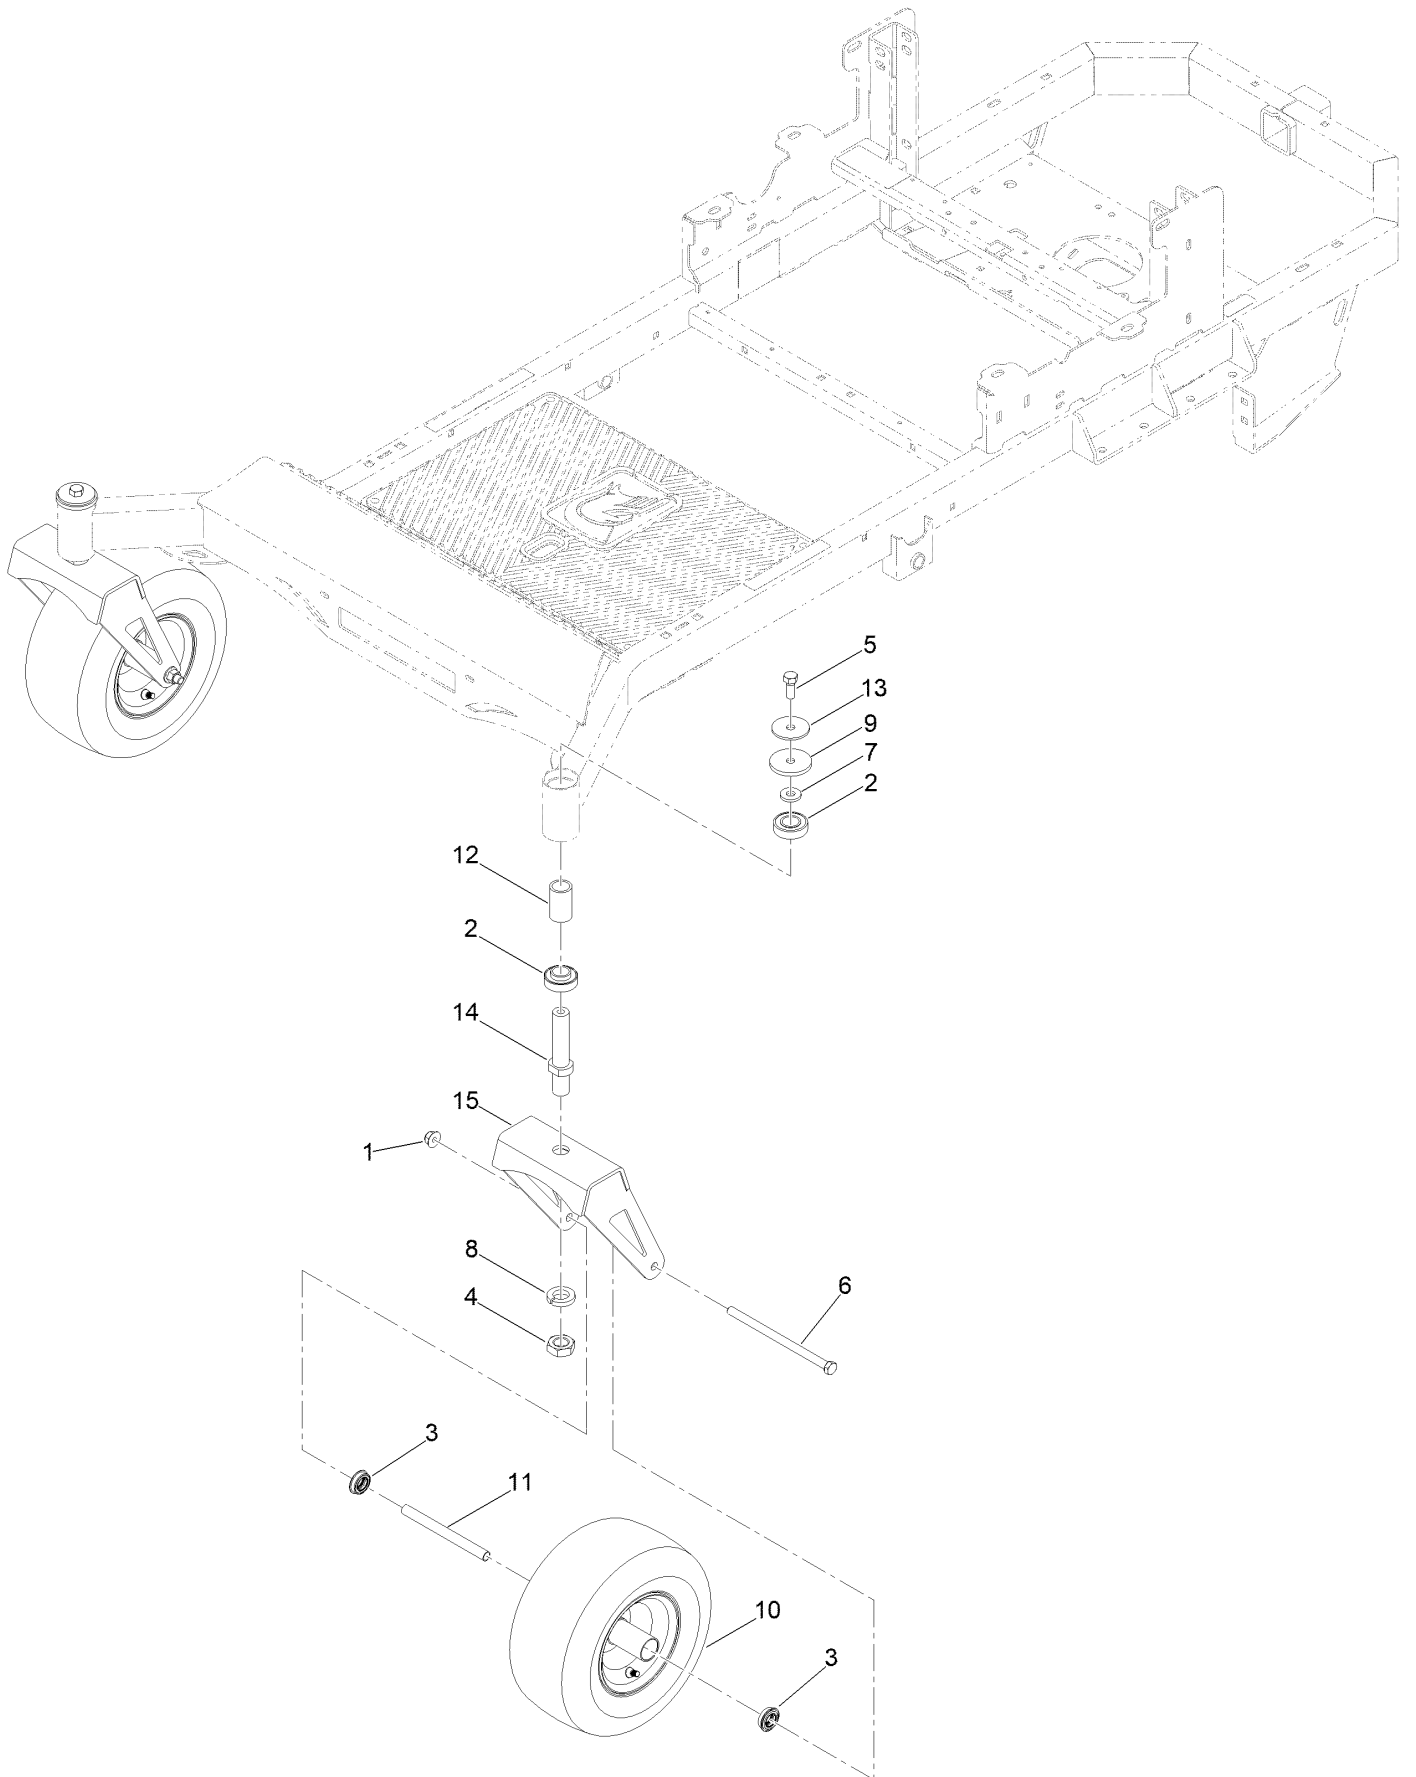

Caster Tire Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	413-0002-00	2	Nut-Lock	8	419-0024-00	2	1In L/W Med Split Zc
2	103-3540	4	Bearing-Ball	9	419-0025-00	2	Ft Hub Plastic Washer
3	410-0018-00	4	Rz Ft Wheel Bearing	10	422-0027-00	2	Rz/Rt Pro Ft Tire
4	413-0063-00	2	Nut-Hex				Assy-Smooth Tread
5	418-0002-00	2	1/2-20 X 1-1/4 Hex Flange Bolt GR 8 Yz	11	425-0010-00	2	Mwr Ft Wheel Spanner
6	418-0003-00	2	1/2-13 X 8-1/2 Hex C/S GR 5 Zinc Yellow	12	425-0011-00	2	Caster Fork Shaft Bearing Spacer
7	419-0003-00	2	1/2 Fender Washer 1-1/4In OD Zinc	13	426-0006-00-P11	2	Mwr Caster Shaft Washer
				14	437-0019-00	2	Mwr Caster Shaft
				15	490-0046-00-P11	2	Rz Caster Fork ASM

Drive Wheel Assembly

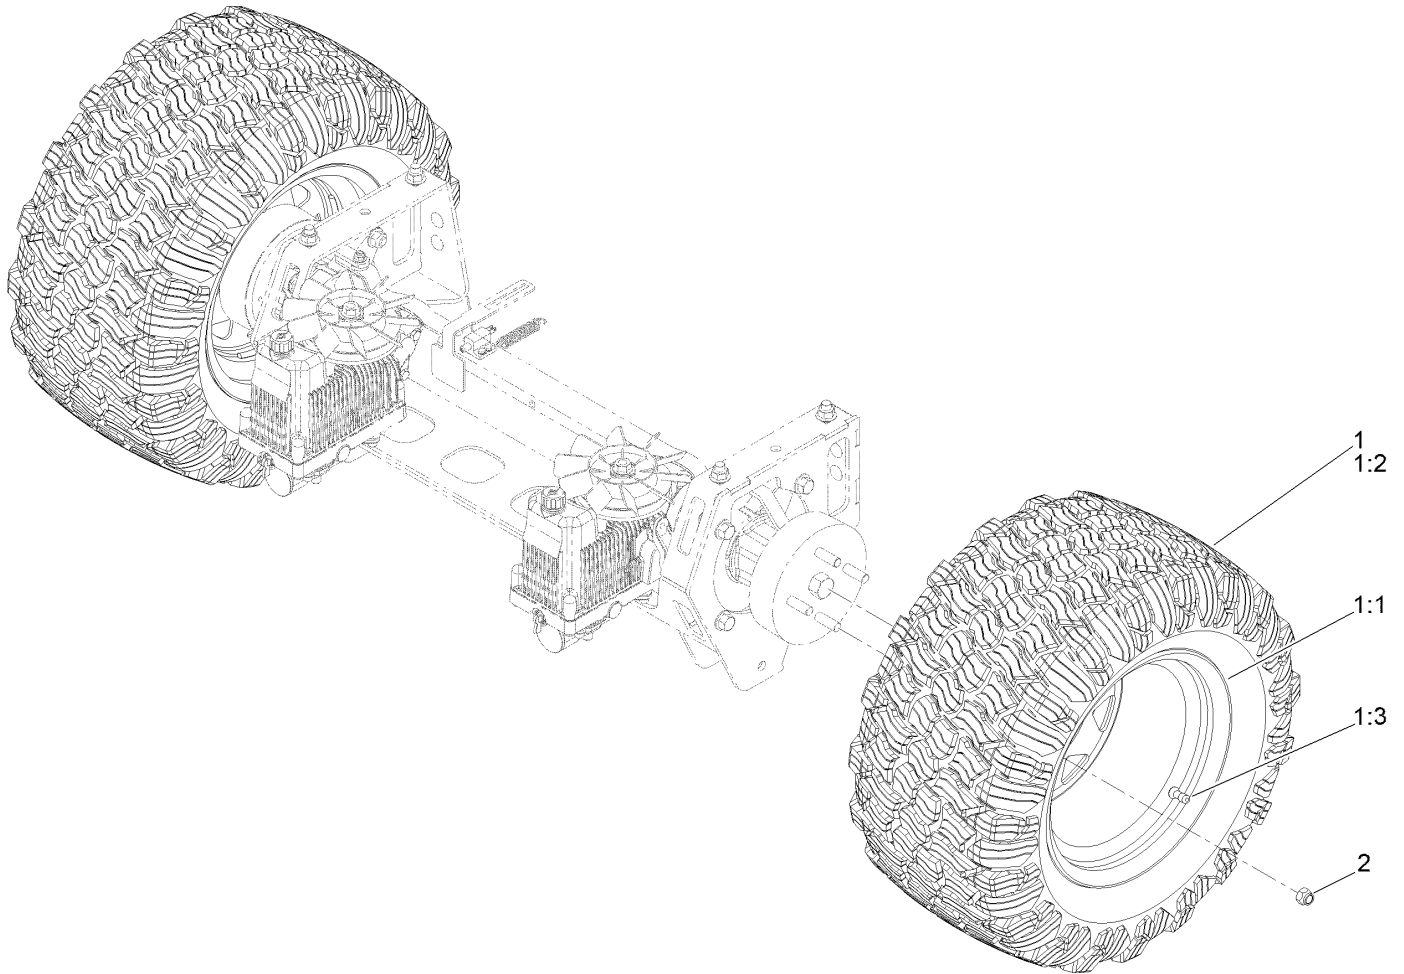


Drive Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-9726	2	Wheel And Tire ASM
1:1	140-7969	1	Wheel
1:2	161-9727	1	Tire

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:3	232-27	1	Stem-Valve
2	413-0015-00	8	1/2-20 Lugnut

Electrical Assembly

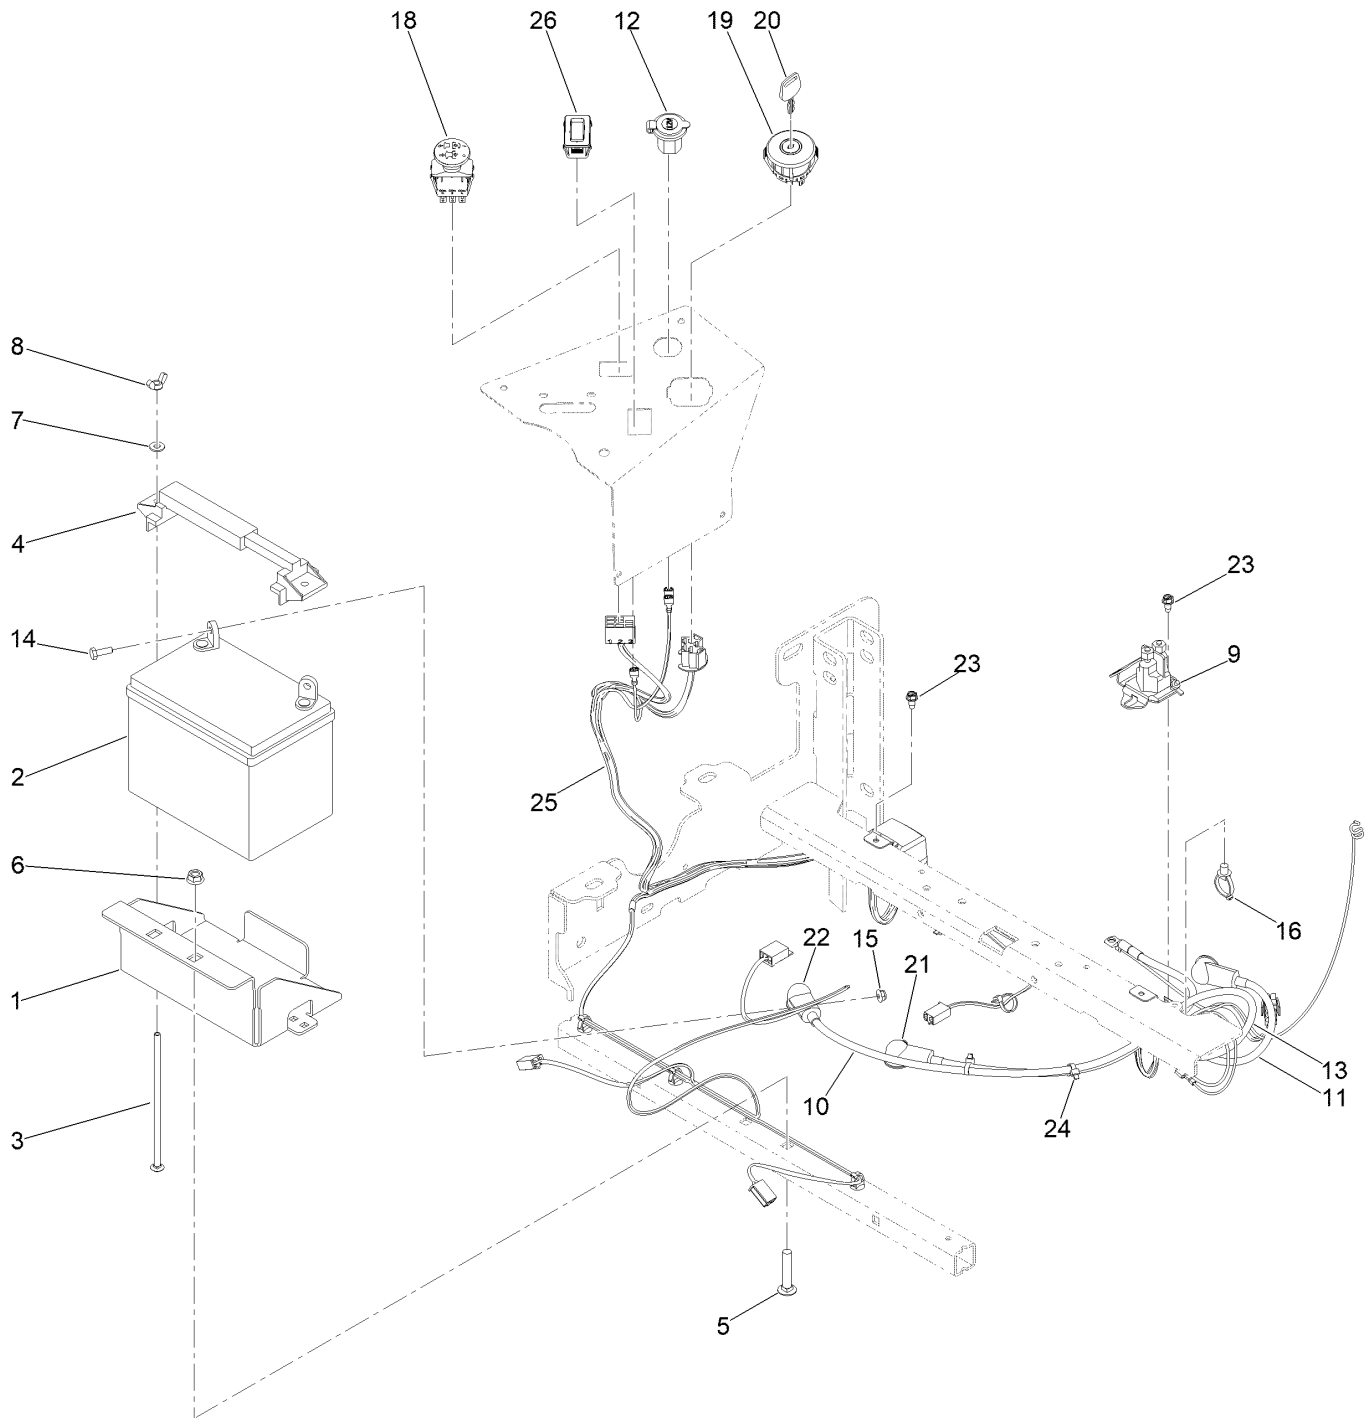


Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	439-0008-00-P11	1	Mwr Battery Box	14	321-4	2	Screw-HH
2	468-1004-00	1	12 Volt Start Battery 300CCA	15	104-7201	2	Nut-HF, NI
3	418-0034-00	2	1/4-20 X 7 Carriage Bolt Zinc	16	32180-030	1	Clip-Tie
4	443-0001-00	1	Battery Hold Down	18	486-0060-00	1	PTO Switch
5	3231-6	2	Screw-CARR	19	486-0062-00	1	Ignition Switch
6	413-0020-00	2	3/8-16 Hex Flange Nut W/Serr Zinc Yellow	20	486-0065-00	1	2023 Mwr Key
7	515-0038	2	Washer-Flat	21	436-0002-00	2	3.15 Lgth Straight Insul Term Cover Red
8	1-803038	2	Wingnut	22	436-0003-00	1	Straight Insulating Terminal Cover
9	486-0006-00	1	Heavy Duty Start Solenoid	23	120-9551	4	Screw-HWH
10	486-0017-00	1	Mwr Negative Cable 28	24	3290-379	6	Tie-Cable
11	486-0018-00	1	Mwr Start Wire 12	25	148-0824	1	Harness-Wire
12	677-2075-00	1	12 Volt Auxilliary Plug	26	148-1063	1	Hour Meter
13	486-0016-00	1	Mwr Positive Battery Cable 25In				

Decklift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	148-0095	1	1/2-13X1.25In Hex Flange Bolt (GR.8) Yz	22	32128-49	1	Nut-HHF
2	148-1074	1	Decklift ASM-Front	23	618-2068-00	1	3/8 X 3/4In GR 8 CARR Bolt Zinc
3	148-1085	2	Support-Bearing Housing	24	148-0422	1	Hex Coupling Nut - Reducer (3/8" To 5/16
4	109-9410	2	Bearing-Cross Shaft, Front	25	419-0007-00	1	Washer-Flat
5	135-5694	2	Bushing-Flange	26	487-0008-00	1	5/16-18X1.286 Damper Ball Stud (.562 TI)
6	135-9063	2	Bushing-Flange	27	487-0005-00	1	5/16-18X1.286 Damper Ball Stud (.562 TI)
7	148-1003-P11	1	(Rz Rear HOC Hanger)	28	148-0951	1	Pedal
8	148-0418-P11	1	Arm-Decklift Rear (3/8")	29	418-0042-00	1	1/2-13 X 3-1/2 Hex C/S GR 5 Zinc Yellow
9	148-0950-P11	1	Lever-Lift	30	148-1036	1	Decal-Height Of Cut
10	148-1075-P11	1	Plate-Decklift, Arm LH	31	923786	4	Rivet
11	148-0940-P11	1	Link-HOC(Left Side)	32	434-0008-00	1	Rz Deck Assist Gas Spring
12	148-0941-P11	1	Link ASM-HOC(Right Side Welded)	33	148-1080	4	Screw-CARR
13	148-0946-P11	1	Bracket-HOC ASM	34	148-1087	6	Screw-HHF
14	148-0943	1	Plate-Transport Lock	35	413-0029-00	8	Nut-Hex
15	148-0949-P11	1	Cover-HOC	36	618-2023-00	2	Screw-CARR
16	420-0009-00	1	Magnetic Pin For Stand On Mwr	37	413-0022-00	2	Nut-HF
17	410-0009-00	4	1/2In ID X 3/4In OD X 3/8In Flange Bush	38	418-0083-00	1	3/8 X 1/2 Socket Shoulder Bolt Yz
18	100-6116	4	Screw-HHF	39	148-1211	1	Bushing-Flange
19	413-1005-00	10	1/2-13 Hex Flange 2-Way Rev Cntr L/Nyz	40	148-1212	1	Washer-Plain
20	418-0276-00	1	Rr Deck Height Bolt (Machined)	41	484-0002-00	1	Stand Up Mwr Brake Arm Grip
21	3296-45	1	Nut-Hex				


Engine Assembly

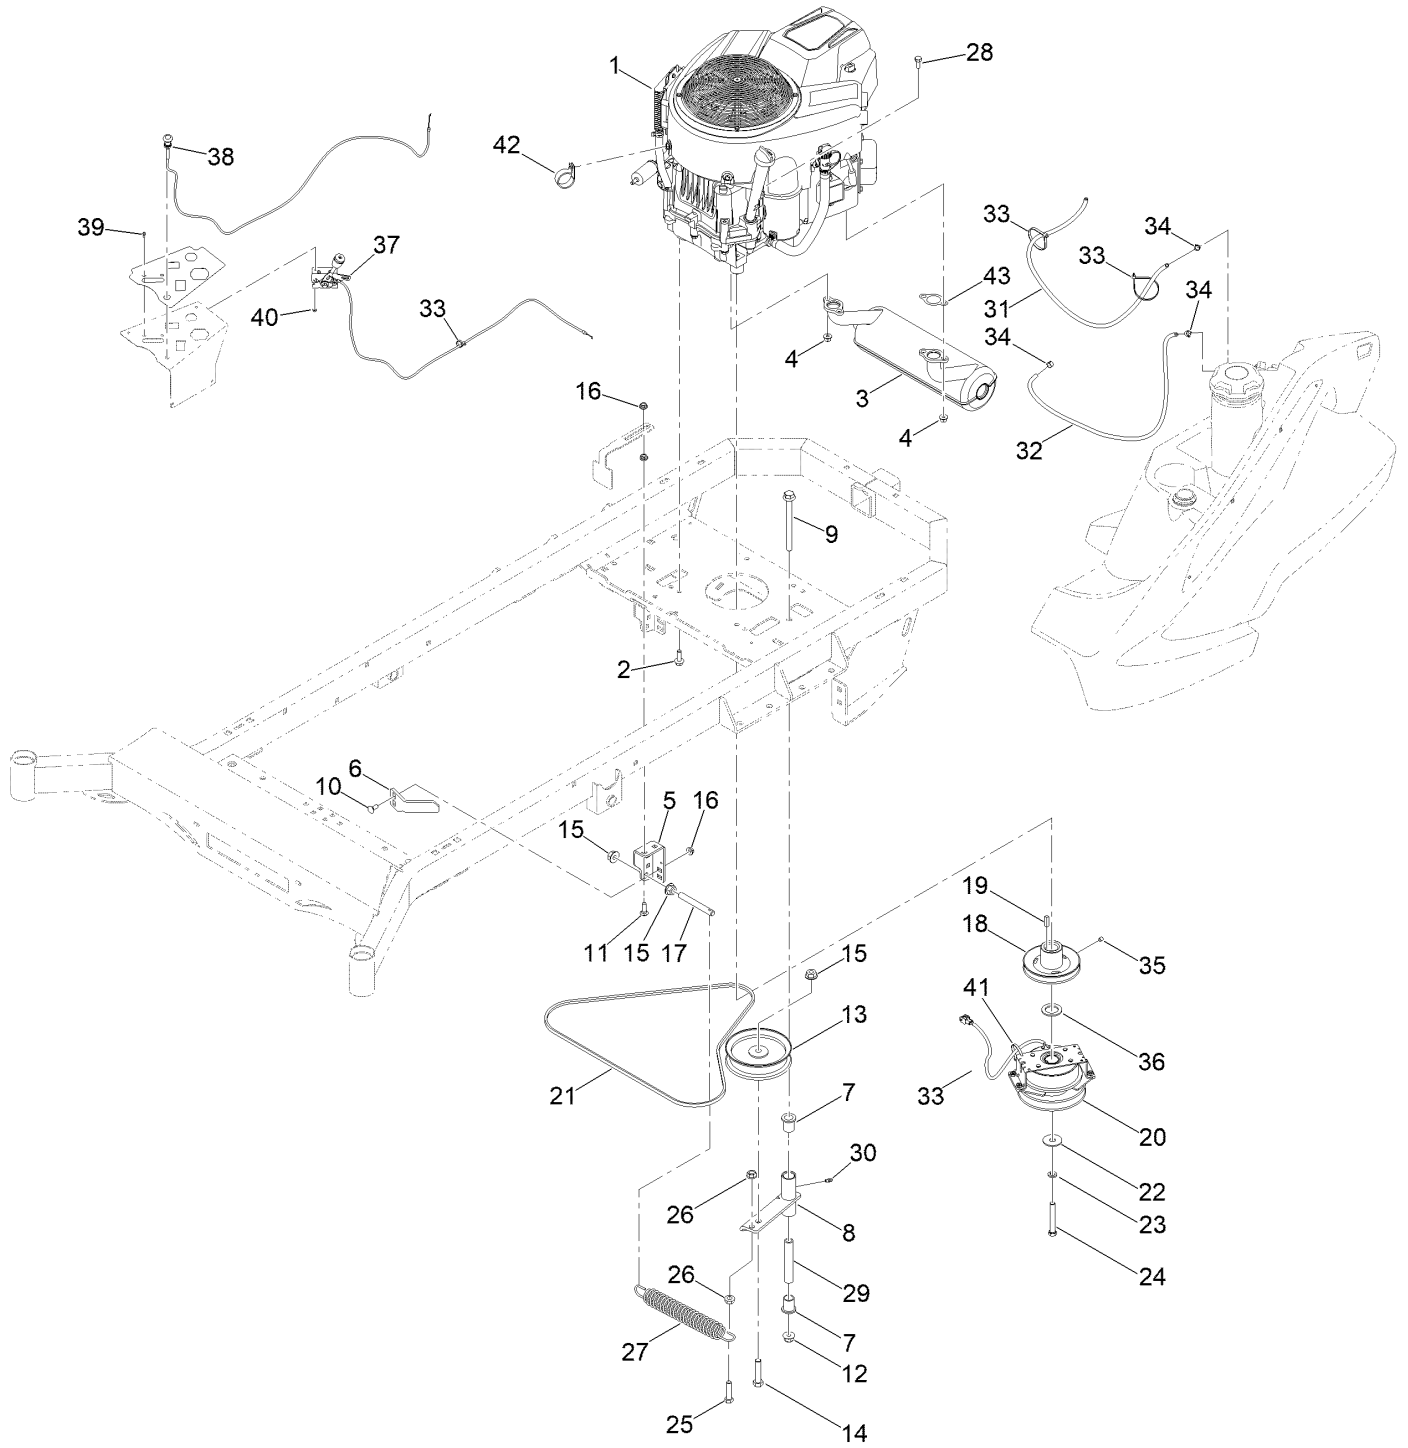

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	415-0101-00	1	27HP Briggs Cxi Engine	22	419-0001-00	1	1/2In X 1-5/8 Belleville Cup Washer Yz
2	418-0023-00	4	3/8-16 X 1-1/8 Ind HWH W/Serr Tri Lob Zy	23	3253-6	1	Washer-Lock
3	415-0052-00	1	Exhaust Syst Briggs 25/27HP Engns	24	418-0223-00	1	Ttq Clutch Bolt
4	418-0278-00	4	M8-1.25 X 20MM Hex Flange Bolt Zinc 10.9	25	418-0013-00	1	Bolt-HH
5	439-0244-00-05	1	Mwr Pump Idler Tensioning Brkt Black	26	32128-37	2	Nut-HF
6	439-0493-00-05	1	2021 Ttq Mower Ogura Clutch Bracket	27	434-0007-00	1	Mwr Deck Spring
7	410-0007-00	2	3/4In ID X15/16In OD X 1-1/8In Flng Bush	28	120-9551	1	Screw-HWH
8	490-0018-00-05	1	Mwr Pump Idler Assy Black	29	425-0006-00	1	Mwr Inner Idler Spacer
9	418-0009-00	1	1/2-13 X 5-1/2 Hex Flange Bolt GR 8 Zy	30	424-0002-00	1	1/4In Drive Type Grease Fitting Yz
10	418-0008-00	2	Bolt-CARR	31	451-0002-00	42	Mwr Fuel Tank Black 3/16In Vent Tube 1Ft
11	418-0062-00	2	5/16-18 X 1-1/4 Carriage Bolt Zc/Yel	32	751-1014-00	30	1/4In SAE J30R7 Bulk Hose 1Ft
12	413-0002-00	1	Nut-Lock	33	3290-379	3	Tie-Cable
13	433-0013-00	1	5-3/4In Idler Pulley 7/16In Spacer Assy	34	472-0004-00	2	1/2In (#8) Hose Clamp
14	325-9	1	Screw-HH	35	418-0280-00	1	5/16-18 X 3/8 Socket Set Screw
15	32128-49	3	Nut-HHF	36	3-6781	1	Washer-Flat
16	413-0022-00	6	Nut-HF	37	464-0001-00	1	Mwr Throttle Cable Assy W / Handle
17	430-0001-00	1	Mwr Pump Idler Spring Tensioner	38	464-0002-00	1	Mwr Choke Cable Assm
18	433-0001-00	1	Mwr Hydraulic Pump Drive Pulley (A Belt)	39	418-0055-00	2	10-24 X 1/2 Socket C/S 18-8 SS
19	1-807259	1	Key	40	110-3145	2	Nut-Lock
20	470-0004-00	1	Mwr Ttq Ogura Clutch	41	414-0001-00	1	6In (40 Lb) Cable Tie Nylon Uv
21	461-0004-00	1	Mwr Pump Belt Rt A X 68.25In Eff Lngth	42	472-0009-00	2	3/4 Epdm Cushion Clamp
				43	147-5158	2	Gasket-Exhaust, Briggs Twin


54 Inch Cutting Deck Assembly

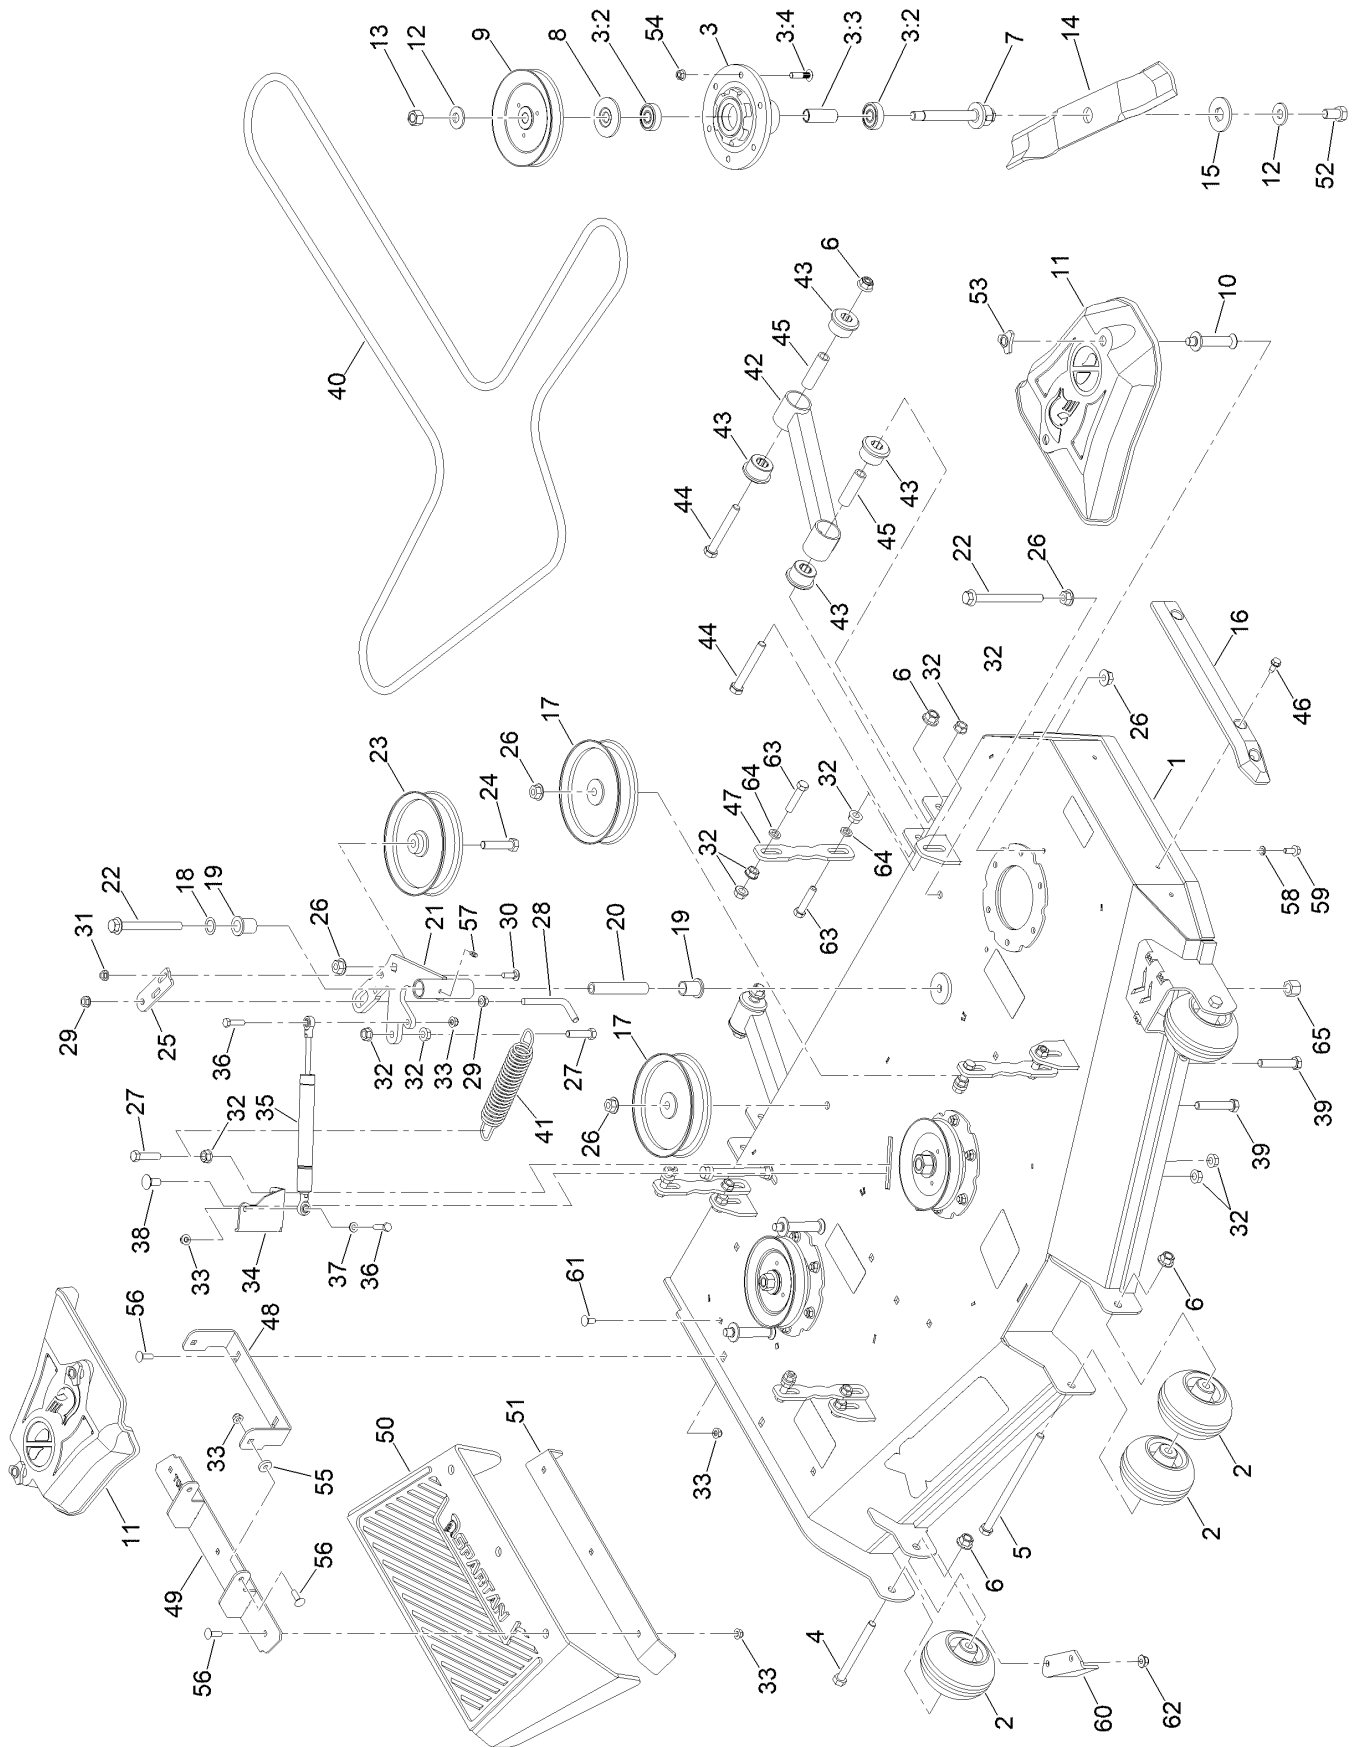

54 Inch Cutting Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	148-0977	1	54 Inch Deck ASM W/Decals	32	32128-37	21	Nut-HF
2	422-0061-00	4	Mwr Anti-Scalp Whl W/O Grease Fitting	33	413-0027-00	9	Nut-HF, NI
3	148-0002	3	Spindle ASM 5In Deck	34	439-0335-00-P11	1	Deck Belt Idler Damper Mtg Brkt Painted
3:2	116-4004	2	Bearing	35	434-0009-00	1	Idler Gas Spring
3:3	148-0025	1	Spacer, Bearing	36	322-47	2	Screw-HH
3:4	116-3473	6	Bolt-Round Head	37	413-0016-00	1	.312Idx.625Odx.062 THK Thrust Brg Oi Brz
4	418-0016-00	2	Screw-HH	38	3232-1	1	Screw-CARR
5	418-0015-00	1	1/2-13 X 8-1/2 Hex C/S GR 2 Zinc Yellow	39	418-0246-00	2	1/2-13 X 2-3/4 Hex Flange Bolt (GR.8) Yz
6	413-0002-00	7	Nut-Lock	40	461-0001-00	1	54 Deck Belt
7	148-0105	3	Shaft - Spindle	41	434-0007-00	1	Mwr Deck Spring
8	148-0102	3	Guard-Bearing Top 0.673In	42	490-0047-00-05	2	Rz Mwr Deck Stablzr Assy
9	148-0028	3	Pulley	43	732-2000-00	8	Red A80 Susp Bushing
10	148-0094	4	Pin-Belt Cover	44	418-0021-00	4	1/2-13 X 3-3/4 Hex C/S (GR.5) Zc/Yel
11	148-0092	2	Cover Belt	45	732-2001-00	4	UTV A-Arm Bushing Sleeve
12	148-0114	6	M16 Spring Washer (39Mmod/ 3.9MM THK)	46	9264964	3	Screw-HWH, Thread Cut
13	148-0112	3	M16X1.5 C8.8 Hex Nut	47	148-0236-P11	4	Hanger-Deck Painted Grey
14	148-0098	3	Blade-Rotary	48	148-0999-00-P11	1	Bracket-Chute
15	148-0108	3	Washer-Hex	49	148-0836-P11	1	Deck Chute Hinge ASM
16	429-0001-00	1	Mwr Nylon Deck Guard	50	481-0010-00	1	Rz Mwr Rubber Discharge Chute
17	433-0015-00	2	6-3/4In Idler Pulley 15/16In Spacer Assy	51	439-0431-00-05	1	Mwr Deck Chute Hinge Backer Brkt
18	418-0110-00	1	.767Idx1.125Odx.016 THK Trip Wv Washer	52	148-0109	3	M16X1.5-30MM C10.9 Hex Bolt
19	410-0007-00	2	3/4In ID X15/16In OD X 1-1/8In Flng Bush	53	148-0234	4	Nut-Knob
20	425-0006-00	1	Mwr Inner Idler Spacer	54	413-0029-00	18	Nut-Hex
21	490-0019-00-P11	1	Mwr Deck Idler Pulley Arm Assy Paint	55	419-0006-00	2	.312 ID X .875OD X .1875 THK F/W NYL
22	418-0009-00	3	1/2-13 X 5-1/2 Hex Flange Bolt GR 8 Zy	56	418-0060-00	7	5/16-18 X 1 Carriage Bolt GR 8 Yz
23	433-0014-00	1	6-3/4In Idler Pulley 7/16In Spacer ASM	57	424-0002-00	1	1/4In Drive Type Grease Fitting Yz
24	325-9	1	Screw-HH	58	3253-4	4	Washer-Lock
25	439-0257-00-P11	1	Deck Idler Pulley Belt Retnr Brkt Paint	59	116-7230	4	Screw-HHF
26	32128-49	7	Nut-HHF	60	107-8541-05	1	Baffle-Discharge
27	324-7	2	Screw-HH	61	3231-27	2	Screw-CARR
28	148-1137	1	Bolt-L	62	104-8301	2	Nut-HF, NI
29	413-0020-00	2	3/8-16 Hex Flange Nut W/Serr Zinc Yellow	63	324-8	8	Screw-HH
30	418-0010-00	2	Bolt-CARR	64	419-0010-00	8	.443 ID X .749 OD X .125 THK Nylon Black
31	413-0022-00	2	Nut-HF	65	3296-23	1	Nut-Lock, NI

Deck Decal Assembly No. 148-0977

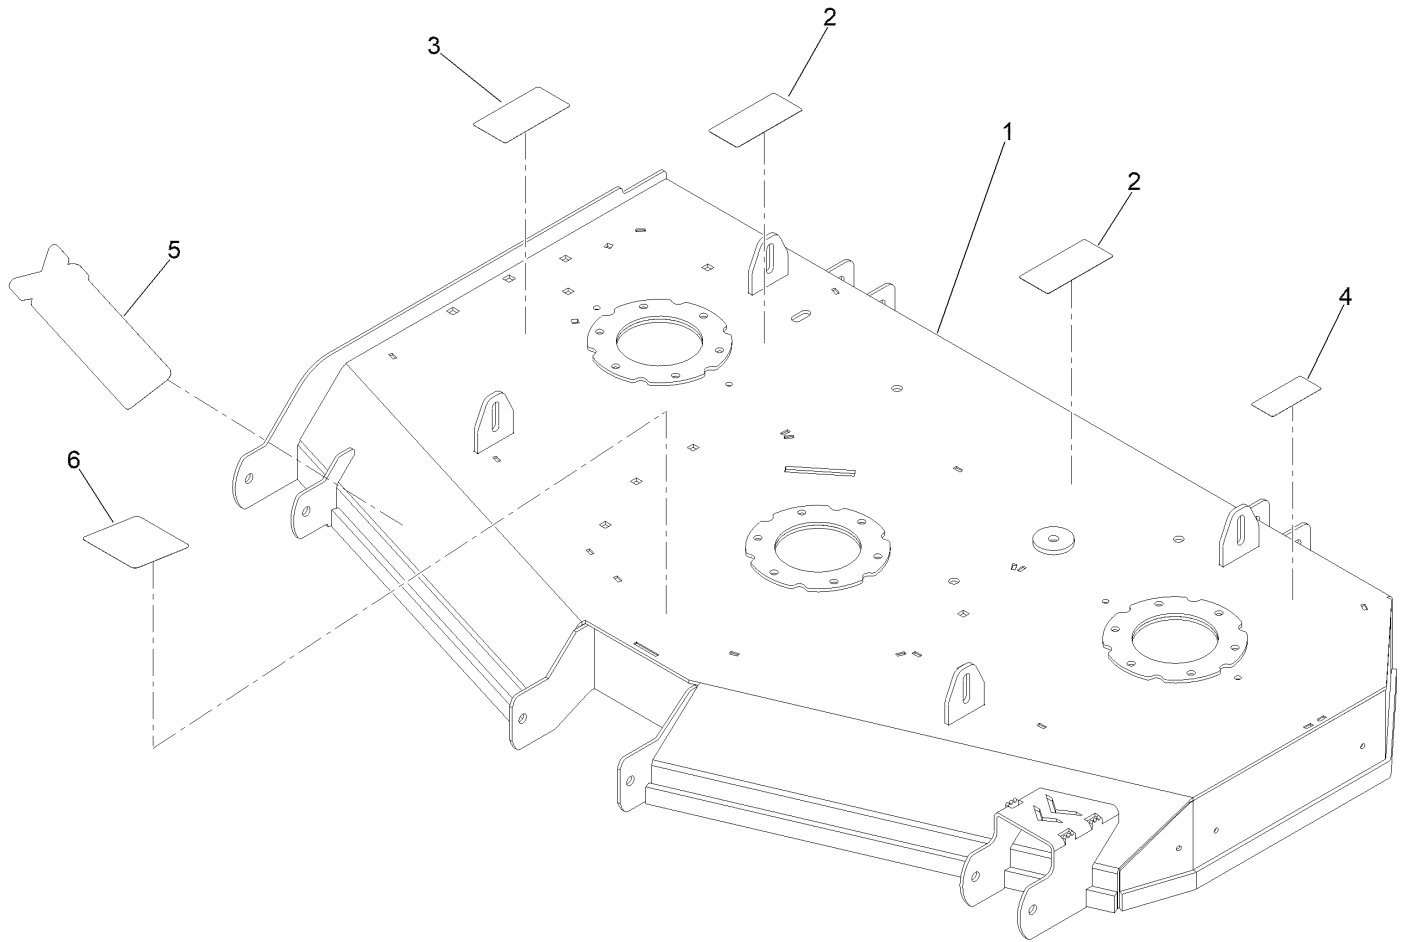


Deck Decal Assembly No. 148-0977 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	54In Deck ●	4	148-0430	1	Decal-Safety Blade Torque
2	125-6127	2	Decal-Rotating Fan Hazard	5	148-0779	1	Decal-Xtf
3	132-0872	1	Decal-Danger, Deck	6	148-0260	1	Decal-Deck Belt Routing

● Not serviced separately

Seat Suspension Assembly

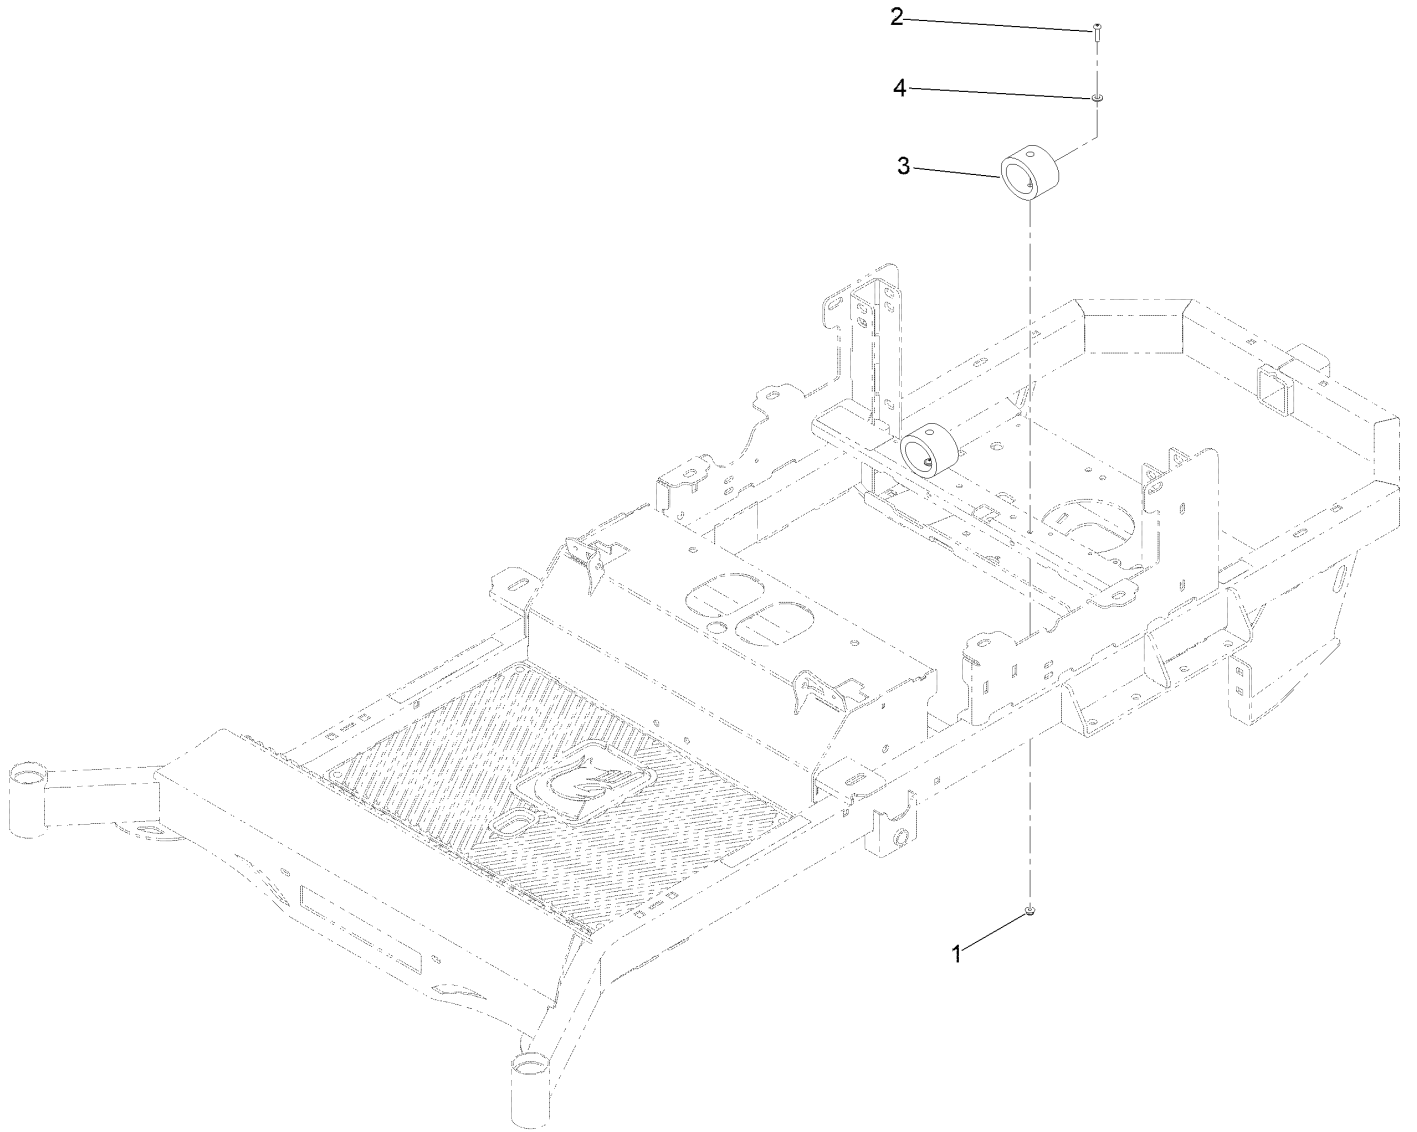

Seat Suspension Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-7201	2	Nut-HF, NI	3	487-0004-00	2	Seat Rr Susp Elastomer
2	418-0039-00	2	1/4-20 X 1 Button Socket C/S 18-8 SS	4	515-0038	2	Washer-Flat

